

Programming Guide

Electronic Lock Kit System 1500

OVERVIEW

The Electronic Lock Kit System 1500 includes a programmable, stand alone, battery-powered replacement door lock with an integrated 12-digit keypad. The handle stores twenty-two access codes with three different programming rights.

Master Code (8-digits, 1 per lock) can:

- Open the lock
- Change the Master Code
- Set/Change/Delete the Sub-Master Code
- Set/Change/Suspend/Restore User Codes
- Set or cancel Dual Code Mode
- Disable or enable audible keypad

Sub-Master Code (8-digits, 1 per lock) can:

- Open the lock
- Change the Sub-Master Code
- Set/Change/Suspend/Restore User Codes
- Disable or enable audible keypad

User Code (4-digits, 20 per lock) can:

- Open the lock
- Change the User Code

Be sure to change the Factory Set Master Code and User Code (right) to unique codes for your cabinets – see pages 2 & 3.

Factory Set Codes:

- Master Code: 11 22 33 44
- User Code: 12 34



BATTERY POWER

The Electronic Lock Kit System 1500 should provide approximately 50,000 openings of 4 seconds each from each new set of 2 x 3V CR2450 coin batteries.

LOW BATTERY WARNING

When the battery power is low the Red LED will flash 3 times before the Blue LED flashes to signal acceptance of an access code. Batteries should be changed as soon as this happens.

BATTERY FAILURE OVER RIDE

If battery power fails, use an external 9V PP3 battery to open the lock.

- Place the contact points of the 9V PP3 battery against the contact points surrounding the Red LED (+) and Blue LED (-).
- Enter the Master Code.
- The lock will open.
- Fit new batteries by removing the rear-fixing screw and swinging the lock down and over the edge of the door. The battery compartment is on the back of the lock. Replace the batteries and secure the handle.

FACTORY SET CODES RESET PROCEDURE

- Remove the rear-fixing screw and swing the lock assembly over the edge of the door to reveal the battery compartment.
- Remove both batteries.
- Press and hold the 1 button, replace one battery, the Blue LED will flash and beep twice. Release the 1 button and within three seconds press the star (*) button three times.
- The blue LED will flash and beep twice and the lock will revert to the factory master code 11 22 33 44 and user code 12 34. All other stored settings will be Erased
- Replace the second battery and secure the handle.
- NOTE: To reset only the Master Code an retain all other settings follow the procedure above, but press the 0 button instead of the 1 and (*) buttons.

OPERATION

Enter the Master Code or the User Code. The Blue LED will flash and the lock will open allowing the handle to be turned to unlatch the door. 4 seconds open time.

PENALTY TIME

Entering three incorrect codes will cause the lock to shut down for 10 seconds.



IIS-739228, 11/25/13, Rev. 1, CPI/D.KNAPP

800-834-4969 (USA & Canada) • www.chatsworth.com • techsupport@chatsworth.com

For international phone numbers, see our website or contact CPI Tech Support.

This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.

Installation Instructions

Electronic Lock Kit System 1500

PROGRAMMING

Every program command must begin by pressing the (#) button, followed by the Master Code, Sub-Master Code or User Code.

MASTER AND SUB-MASTER CODE COMMANDS

SET OR CHANGE THE USER CODE (4-digits)

(#) (Master or Sub-Master Code) • (03) • (User Code ID) • (User Code) ••

Example: #11223344•03•02•1455••

Result: The second User Code is 1455.

Note: System 1500 can support 20 User Codes. You must assign a unique User Code ID (1-20) for each User Code.

SUSPEND INDIVIDUAL USER CODE

(#) (Master or Sub-Master Code) • (04) • (User Code ID) ••

Example: #11223344•04•01••

Result: The User ID number 01 is valid but suspended. The User Code assigned to User ID number 01 will not unlock the cabinet. The Red and Blue LEDs will flash together after the code is entered.

RESTORE INDIVIDUAL USER CODE

(#) (Master or Sub-Master Code) • (05) • (User Code ID) ••

Example: #11223344•05•01••

Result: The User ID number 01 is restored. The User Code assigned to User ID number 01 will now be able to unlock the cabinet.

SUSPEND ALL USER CODES

(#) (Master or Sub-Master Code) • (06) ••

Example: #11223344•06••

Result: All User Codes suspended. When a valid code is entered, the lock will remain locked, but the Red and Blue LEDs will flash together.

MASTER AND SUB-MASTER CODE COMMANDS (continued)

RESTORE ALL USER CODES

(#) (Master or Sub-Master Code) • (07) ••

Example: #11223344•07••

Result: All User Codes are restored.

SET OR CHANGE THE SUB-MASTER CODE (8-digits)

(#) (Master or Sub-Master Code) • (08) • (New Sub-Master Code) • (New Sub-Master Code) ••

Example: #11223344•08•55667788•55667788••

Result: The new Sub-Master Code is 55667788.

DISABLE/ENABLE AUDIBLE KEYPAD

(#) (Master or Sub-Master Code) • (18) • (18) ••

Example: #11223344•18•18••

Result: The default setting is Enabled so there is a sound each time a keypad button is pressed. This command disables or enables the audible keypad.

USER CODE COMMANDS

CHANGE THE USER CODE (4-digits)

(#) (User Code) • (New User Code) ••

Example: #1234•2222••

Result: The User Code is changed from 1234 to 2222.

Note: The symbol • indicates the blue LED flashing once.

Installation Instructions

Electronic Lock Kit System 1500

The following commands require the Master Code.

MASTER CODE COMMANDS

CHANGE THE MASTER CODE (8-digits)

(#) (Master Code) • (01) • (New Master Code) • (New Master Code) ••

Example: #11223344•01•22334455•22334455••

Result: The Master Code is changed from the default 11223344 to 22334455.

DELETE THE SUB-MASTER CODE

(#) (Master Code) • (09) • (09) ••

Example: #11223344•09•09••

Result: The Sub-Master Code is deleted.

SET DUAL CODE MODE

(#) (Master Code) • (12) • (12) ••

Example: #11223344•12•12••

Result: Two valid codes are now required to open the lock. Enter two User Codes or a User Code and a Sub-Master Code to open the lock. The Master Code will also open the lock.

CANCEL DUAL CODE MODE

(#) (Master Code) • (13) • (13) ••

Example: #11223344•13•13••

Result: Lock reverts to standard mode where only one code is required to open the lock.

Note: The symbol • indicates the blue LED flashing once.