


TOOLS REQUIRED

#2 Screwdriver or 5/16" Nut driver

INSTALLATION

1. Mount each bracket to the raised bosses on the cabinet rear panel using four 10-32 x 5/16" hex head screws. Note the left and right hand orientation of the brackets. The left bracket mounts to the outside pair of mounting bosses.

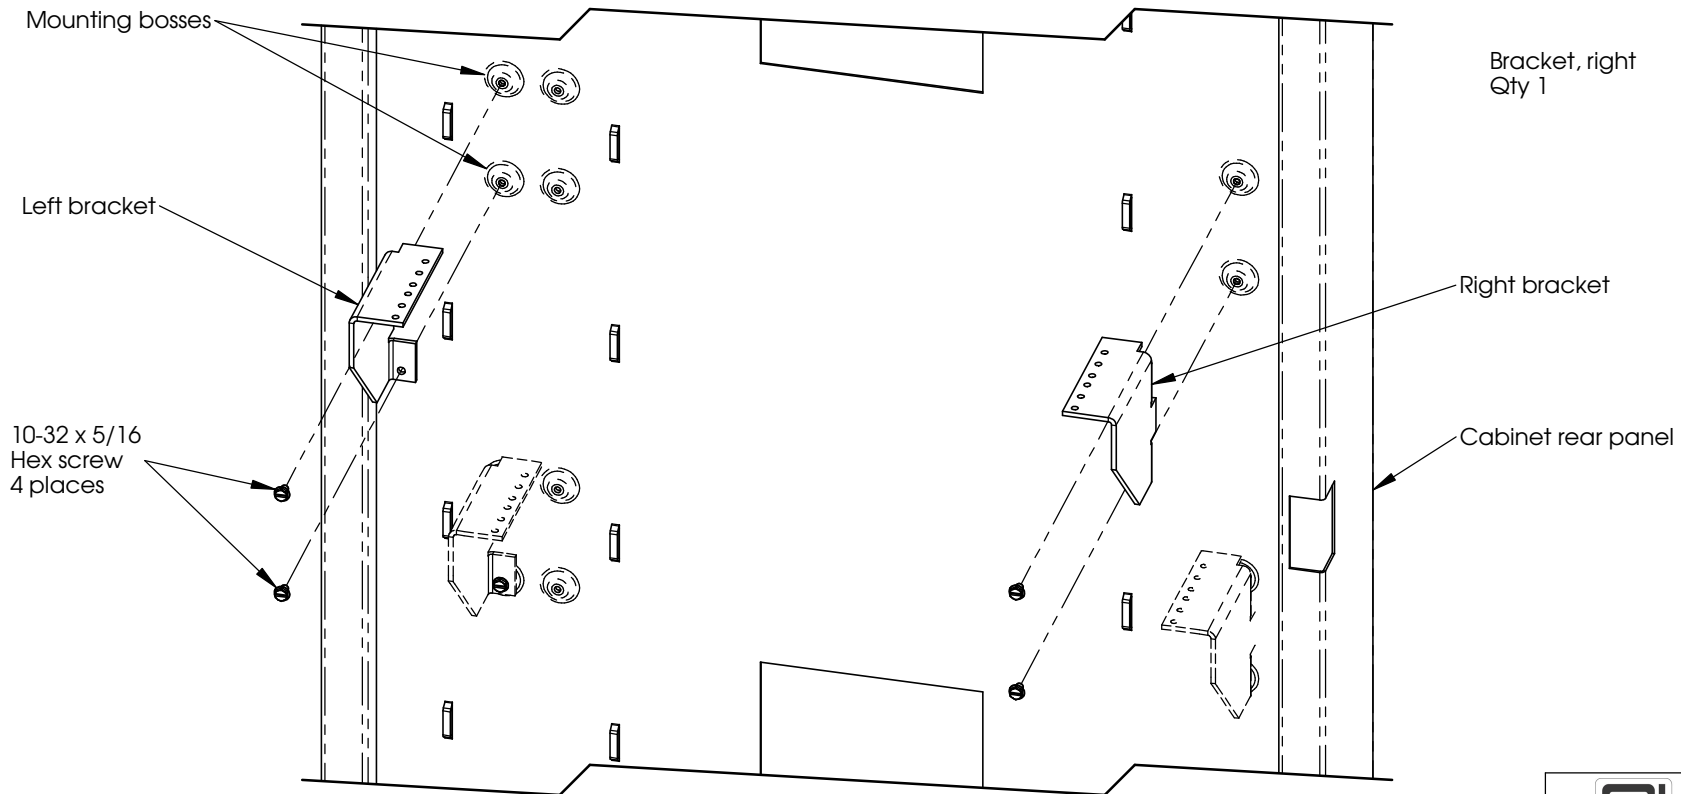


PARTS INCLUDED

SHEET 1


10-32 X 5/16 Hex head screw
Qty 5



Bracket, left
Qty 1

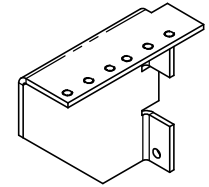

Bracket, right
Qty 1

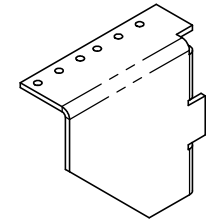

Right bracket

Cabinet rear panel

 CHATSWORTH PRODUCTS, INC.

800-834-4969 techsupport@chatsworth.com www.chatsworth.com

INSTALLATION INSTRUCTIONS,
90 DEG EQUIPMENT BRACKET,
CUBE IT CABINET

THIS DRAWING CONTAINS INFORMATION PROPRIETARY TO CHATSWORTH PRODUCTS, INC. ANY REPRODUCTION DISCLOSURE OR USE OF THIS DRAWING IS EXPRESSLY FORBIDDEN EXCEPT AS AGREED TO IN WRITING BY CHATSWORTH PRODUCTS, INC.