

Installation Instructions

CASTER SKIRT FASCIA, TERAFRAME-HD

Tools Required

13mm Socket Wrench

Parts list

1 Fascia panel

2 M8X16 Bolts



Installation Notes

1. The cabinet must be bolted in place using bolt down Kit (CPI P/N 16279-X01).
2. This accessory is used to cover the gap between the floor and the cabinet created by the integrated caster kit. Depending on the end cabinet height after the cabinet is placed on levelers, some gap will remain between the floor and this fascia.
3. This accessory is designed to be used at the end of a cabinet row.

Assembly Sequence

Installing the caster skirt fascia

1. Check for proper fit of fascia.
 - Swivel caster may require rotation.
2. Attach fascia, using quantity 2 M8x16 bolts.

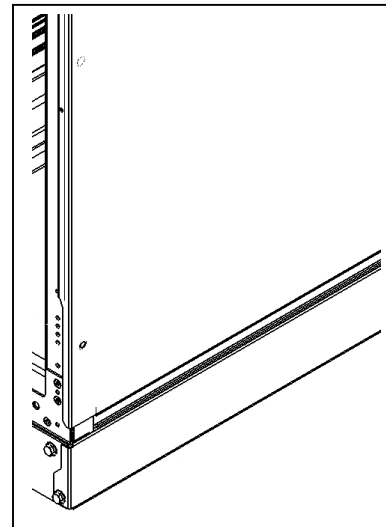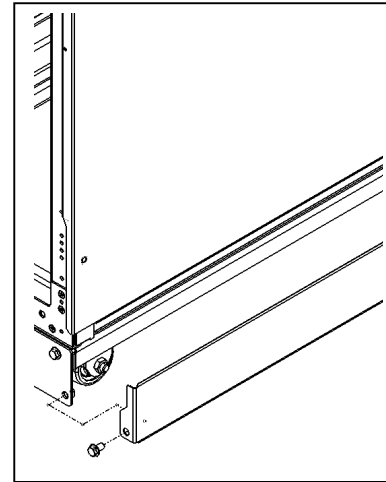

CHATSWORTH PRODUCTS, INC.

IIS-716277-001, 03/05/10, Rev. 1, CPI/J Davis

800-834-4969 (USA & Canada) • www.chatsworth.com • techsupport@chatsworth.com

For international phone numbers, see our website or contact CPI Tech Support.

This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.