

Installation Instructions

MODEL NUMBERS: WA064-WAP



This enclosure is designed to wall mount in any position in accordance with local codes and regulations. Mounting hardware is designed for hollow concrete block, concrete, plaster, or wall board.

■ Assembly Components

- 1 ea. - WA064WAP Access point enclosure.
- 4 ea. - #10 X 1 pan head screws
- 4 ea. - Plastic conical screw anchors for #10 screw.
- 4 ea. - Flat steel washers, size #10.
- 1 ea. - Drill template
- Installation Instructions

■ Installation Tools and Supplies to be provided by installer

1. Screw drivers.
2. Drill with ¼" bit.
3. Hammer or plastic mallet (to seat anchors).
4. Miscellaneous hardware as required by specific location requirements.
5. All wiring and connectors for cable wiring to Wireless Access Point



STEP 1

Opening the Shipping Box and Removal of the Wireless Access Point Enclosure

- Prepare a location for the ACCESS POINT ENCLOSURE to be positioned for inspection after removal from the shipping container. Inspect the enclosure for shipping damage or missing parts.

STEP 2

Equipment Mounting Location

1. Determine the best location suitable for mounting the Wireless Access Point.
2. Allow enough room around the enclosure to open the door, attach wires and connectors, and extend antenna(s).
3. The hardware provided is suitable for mounting to wall board of minimum ½" thickness, hollow concrete block, or concrete.

STEP 3

Using the Template

- Layout the positions of the four mounting holes for the enclosure using the template or the dimensions provided. The template also shows the position of the knockout opening on the back wall of the enclosure if needed. The hardware provided is suitable for mounting to wall board of minimum 1/2" thickness, hollow concrete block, or concrete.

STEP 4

Drill Holes and Set Anchors

1. At mounting hole locations drill four (4) ¼" diameter mounting holes a minimum 1-1/8" deep.
2. Insert one anchor in each hole and tap with hammer to seat.

STEP 5

Attach Enclosure

1. Customer provides all wiring connections to the enclosure.
2. Attach Wireless Access Point enclosure to the wall mounting anchors using the four (4) screws and washers provided .
3. Secure screws. Check for antenna clearance and door opening clearance.

800-834-4969 US & Canada • www.chatsworth.com

Installation Instructions

MODEL NUMBERS: WA064-WAP

STEP 6

Inspection

1. Ensure that the WIRELESS ACCESS POINT ENCLOSURE is hung from the building structure according to local code and regulations.
2. Ensure that the ACCESS DOOR opens and closes without binding or pinching cables.
3. Ensure that the cable bending radius is within manufacturer specifications.



Installation Instructions


MODEL NUMBERS: WA064-WAP

HINGED SIDE F ENCL SURE



4.50


ANTENNA(S) THIS SIDE



9.25



CHATSWORTH PRODUCTS, INC.

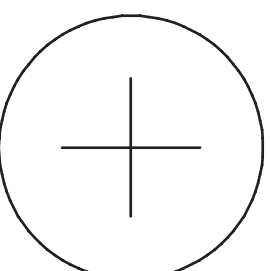

KN CK UT H LE
P SITI N (IF NEEDED)

M UNTING H LE

CHATSWORTH PRODUCTS, INC.
www.chatsworth.com
techsupport@chatsworth.com

800-834-4969