

Installation Instructions

CABLE LASHING BRACKET, 6-SLIDE CABINET

Included Hardware:

M6X10mm Hex Screw, 4 ea.

M6 Drop-In-Nut, 4 ea.

Tools Required:

10mm wrench


Assembly Notes:

The Lashing Bracket provides attachment points for cable ties or Velcro Straps (see Fig. 3).



Installation Instructions

The Lashing Bracket (Fig.1) attaches to the cabinet slides (Fig 2).

1. Position one of the Lashing Brackets at the desired location along the Cabinet slides (in front of, behind or in between equipment rails).
2. Insert M6 Drop-in-Nuts in the slides as shown below. Fasten the bracket using M6X10mm screws into the Drop-In-Nut (Fig 2, detail).
3. Repeat steps (1-2) for the other Lashing Bracket.

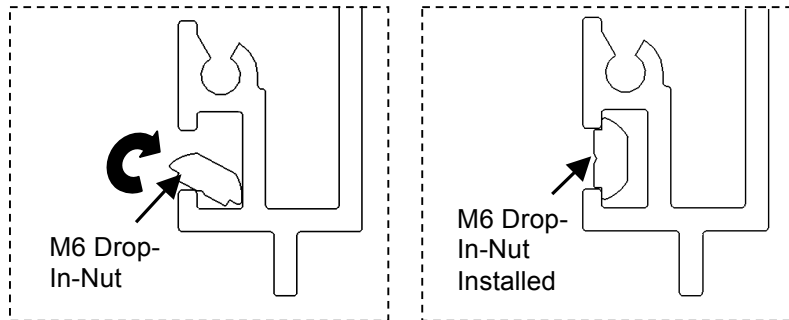

M6 Drop-In-Nut Installation

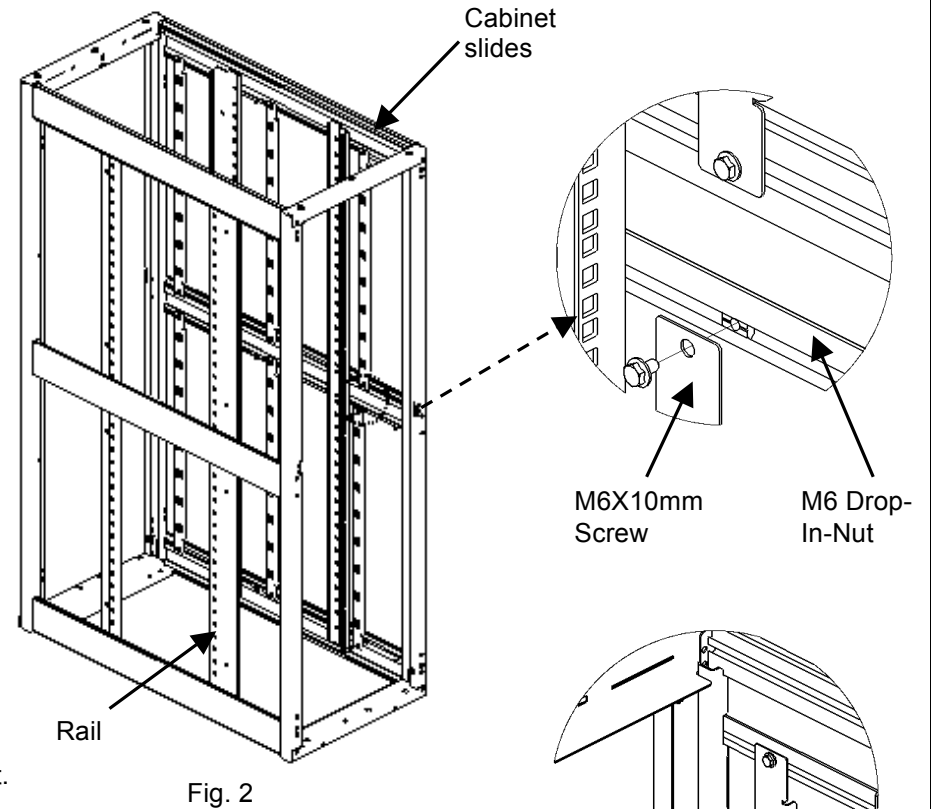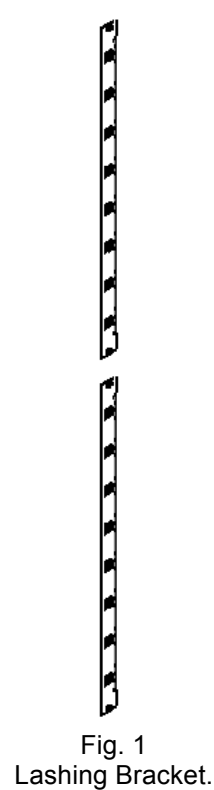

Cables are attached to bracket using cable ties or Velcro Straps

