

Installation Instructions

TOP PANEL ASSEMBLY, EUROFRAME CABINET

Included Hardware:

M4 Torx T-20 screws – 8 each


Tools Required:

Screw gun


Torx T-20 tip

Assembly Sequence:

1. Partially install M4 Torx T-20 screws on cabinet frame as shown (2 front and rear, 3 each side). Leave enough space for top panel to slide between screw head and frame.

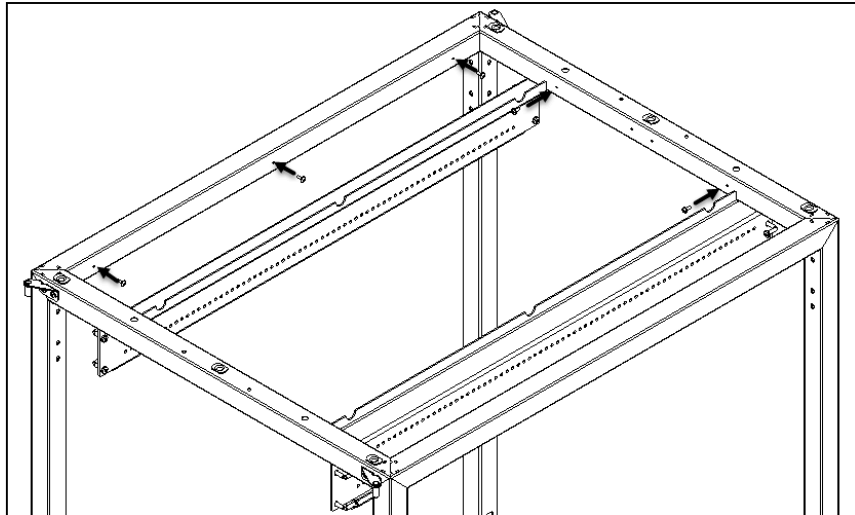

2. Lower top panel in place by sliding between screws and frame, then tighten screws.

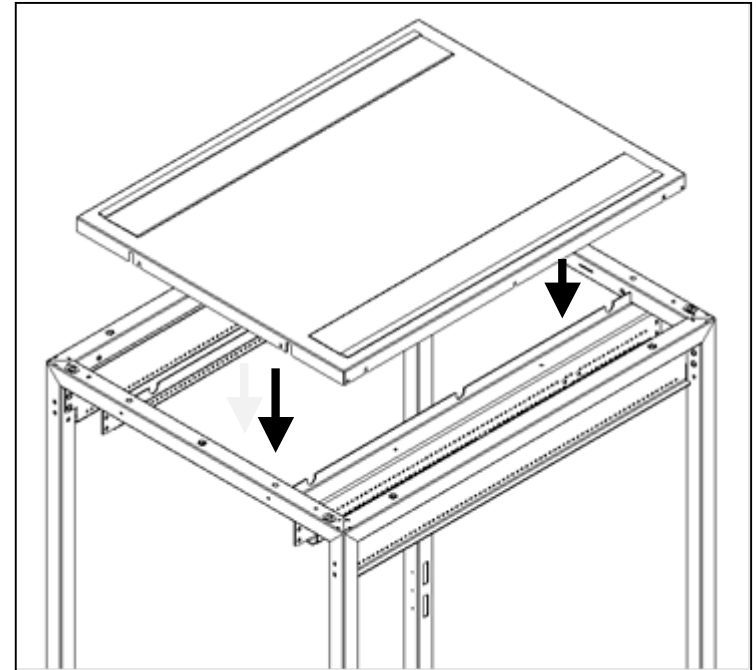

CHATSWORTH PRODUCTS

IIS -768015, 06/09/2016, Rev. 1, CPI/PEH

800-834-4969 (USA & Canada) • www.chatsworth.com • techsupport@chatsworth.com

For international phone numbers, see our website or contact CPI Tech Support.

This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.