

Installation Instructions

RMR WALL-MOUNT GROUND LUG KIT

Safety Information



WARNING: Improper use of this product may lead to serious injury. Read and understand all instructions for proper installation and use of this product.

Tools Required


T25 Torx Screw Driver

Included Hardware


(2) M5.5x9 Torx Panhead Screw

Assembly Sequence

1. Remove masking to expose bare metal.
2. Apply anti-oxidant to fully cover bare metal.
3. Attach Ground Lug with two washers and two M5.5 Torx panhead screws into circular holes as shown. (Torque 44 IN-LB [5 N-M]).

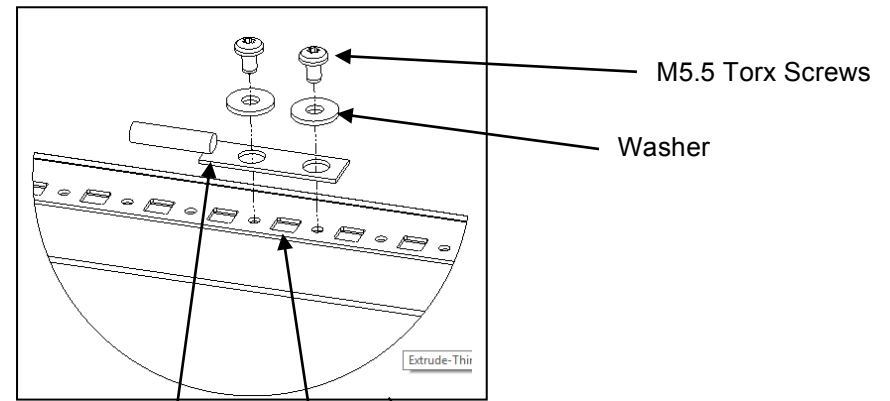

Ground Lug Remove masking

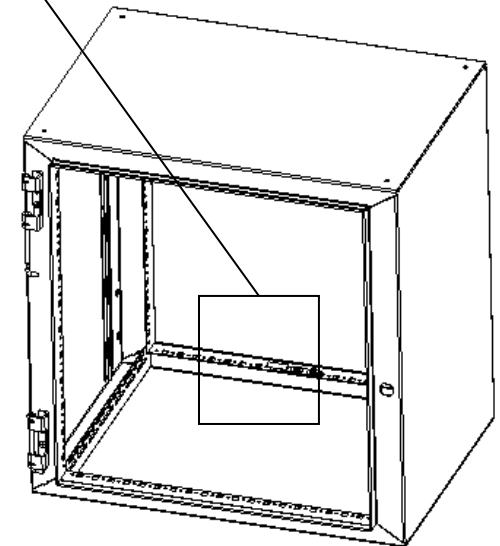

IIS-737009, 09/16/16, Rev. 1, CPI/SJG

800-834-4969 (USA & Canada) • www.chatsworth.com • techsupport@chatsworth.com

For international phone numbers, see our website or contact CPI Tech Support.

This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.