

# Installation Instructions

## RMR DOOR DOCUMENT HOLDER


### Safety Information



**WARNING:** Improper use of this product may lead to serious injury. Read and understand all instructions for proper installation and use of this product.

### Installation Instructions

1. Remove adhesive tape liner.
2. Position document holder between vertical stiffeners on door at desired height.
3. Firmly press document holder against door to ensure adhesive tape adheres to the door.

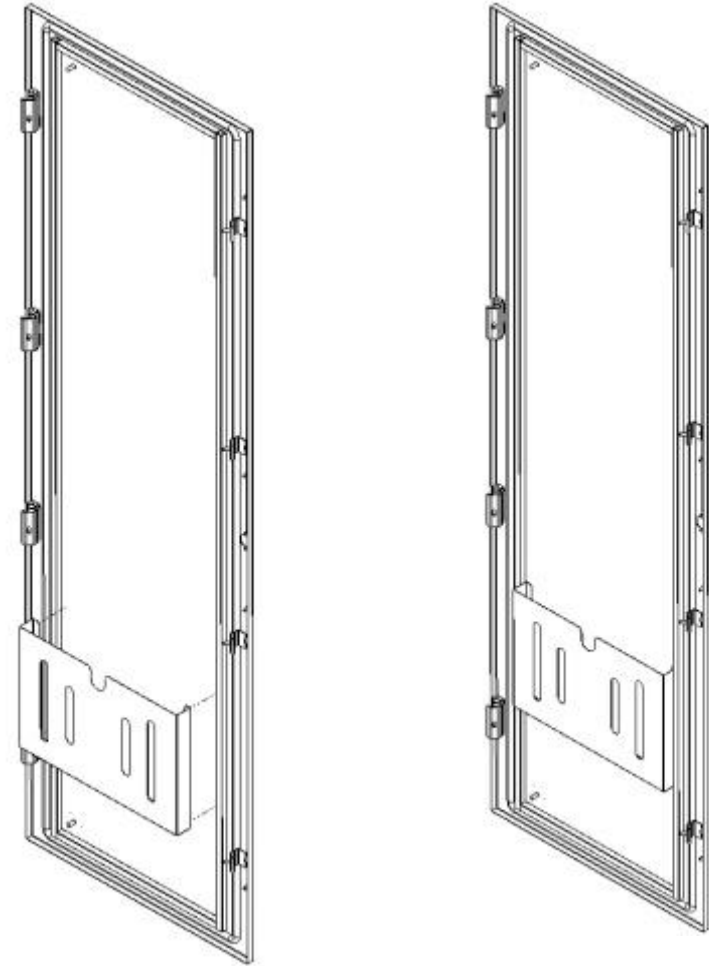

IIS-737739, 08/04/16, Rev. 1, CPI/JAG  
800-834-4969 (USA & Canada) • [www.chatsworth.com](http://www.chatsworth.com) • [techsupport@chatsworth.com](mailto:techsupport@chatsworth.com)  
For international phone numbers, see our website or contact CPI Tech Support.

*This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.*