

Installation Instructions

RMR MODULAR TOP PANEL

Safety Information



WARNING: Improper use of this product may lead to serious injury. Read and understand all instructions for proper installation and use of this product.

Tools Required


Large crescent wrench

Included Hardware

(4) M10 Lifting Eye

Assembly Sequence

1. Place the top panel over the cabinet. Orient grounding studs adjacent to side panels.
2. Install (4) lifting eyes as shown using large crescent wrench until fully seated.

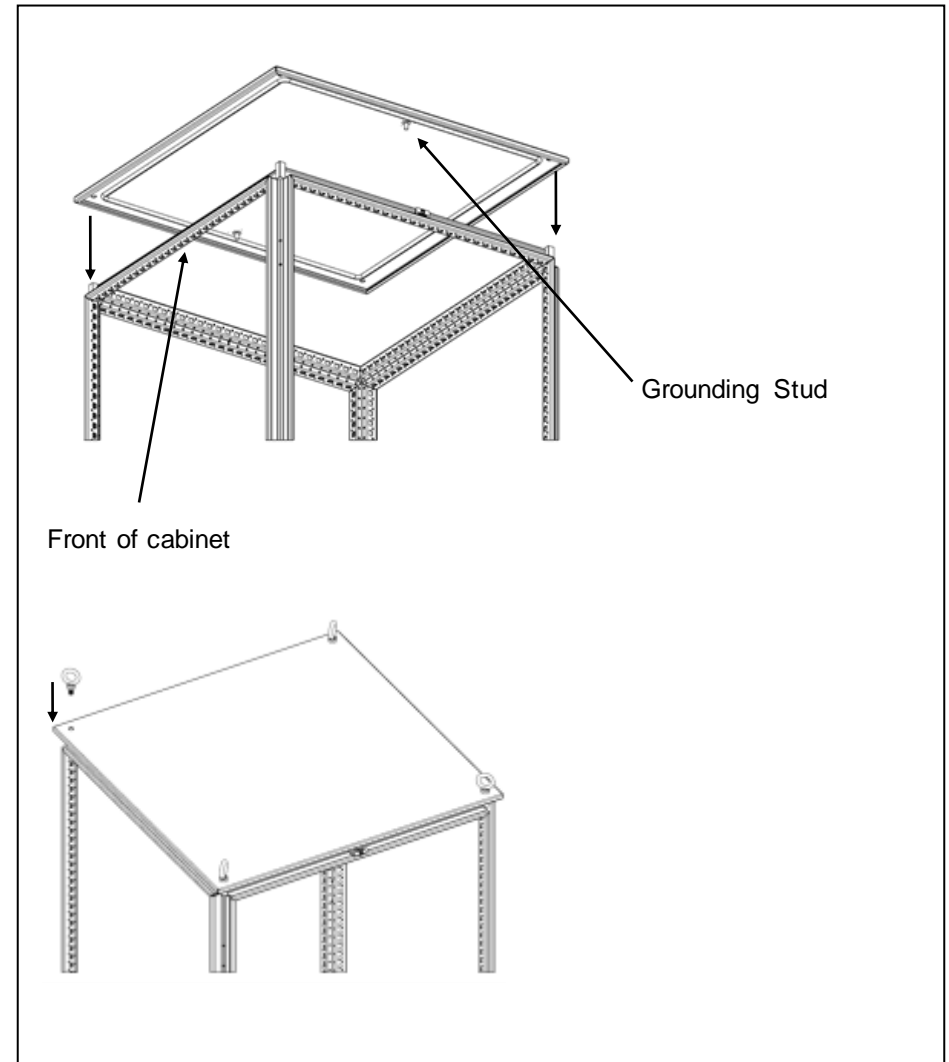

IIS-737760, 09/14/16, Rev. 1, CPI/REL
800-834-4969 (USA & Canada) • www.chatsworth.com • techsupport@chatsworth.com
For international phone numbers, see our website or contact CPI Tech Support.

This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.