

Installation Instructions

RMR SOLID BOTTOM PANEL

Safety Information



WARNING: Improper use of this product may lead to serious injury. Read and understand all instructions for proper installation and use of this product.

Tools Required


10mm socket driver

Included Hardware

- (4) M6 Serrated Flange Hex nuts
- (4) Bottom clamp bracket

Assembly Sequence

1. Place the cabinet over the bottom panel. Orient grounding stud adjacent to front door.
2. Install (4) clamp brackets as shown using M6 hex nuts positioned toward side panel. Torque to 88in-lb [9.9N-M]

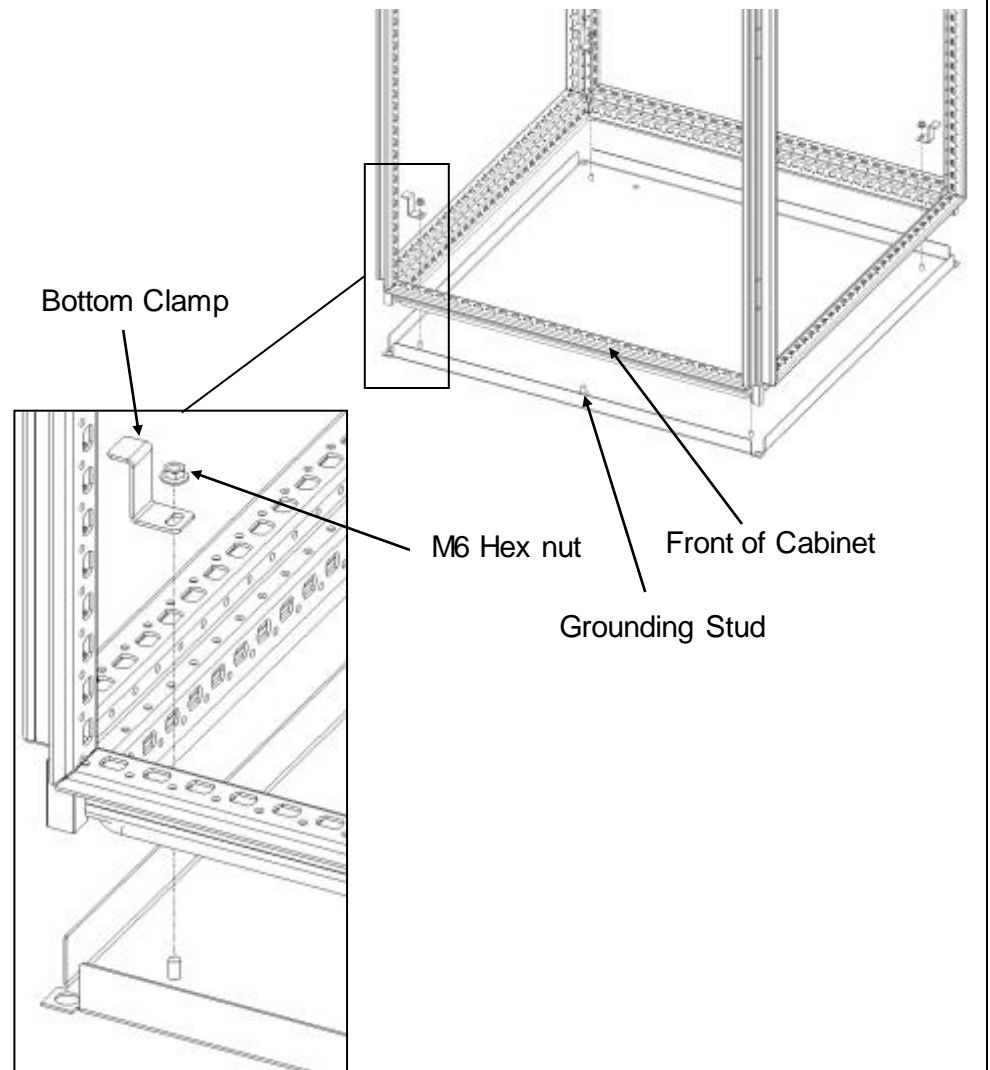

IIS-737798, 09/12/16, Rev. 1, CPI/JAG
800-834-4969 (USA & Canada) • www.chatsworth.com • techsupport@chatsworth.com
For international phone numbers, see our website or contact CPI Tech Support.

This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.