

Installation Instructions

RMR CORNER BAYING BRACKET KIT

Safety Information



WARNING: Improper use of this product may lead to serious injury. Read and understand all instructions for proper installation and use of this product.

Included Hardware



(16) M5.5x9 Torx Pan Head Screw

Tools Required

T25 Torx Screw Driver

Assembly Sequence

1. Connect the two cabinets together with an internal corner bracket using M5.5 Torx panhead screws in self-tapping accessory holes.
2. Repeat Step 1 for other three corners where adjacent cabinets connect.
3. Corner brackets may also be installed using M6 Drop-in Nut Hardware Kit (37942-001).

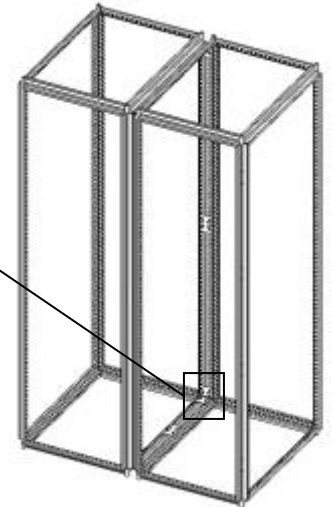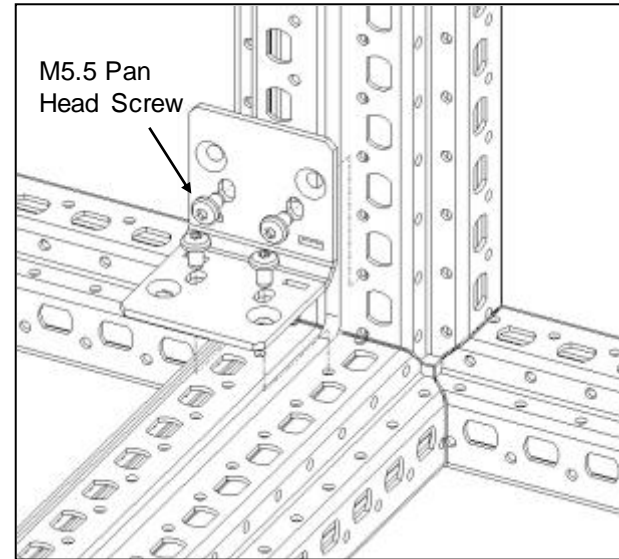

IIS-737824, 08/19/16, Rev. 1, CPI/JAG
800-834-4969 (USA & Canada) • www.chatsworth.com • techsupport@chatsworth.com
For international phone numbers, see our website or contact CPI Tech Support.

This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.