

# Installation Instructions

## RMR M6 DROP-IN NUT HARDWARE KIT

### Safety Information



**WARNING:** Improper use of this product may lead to serious injury. Read and understand all instructions for proper installation and use of this product.

### Tools Required


10mm socket wrench or driver

### Included Hardware

(20) M6 Drop-in Nut  
(20) M6 Serrated Flange Hex Head Screw

### Assembly Sequence

1. Insert M6 Drop-in Nut into Double-D Cam Hole on frame member at desired location.
2. Rotate M6 Drop-in Nut 90 degrees using straight screw driver to engage frame.
3. Install accessory onto M6 Drop-in Nut using M6 Serrated Flange Nut.

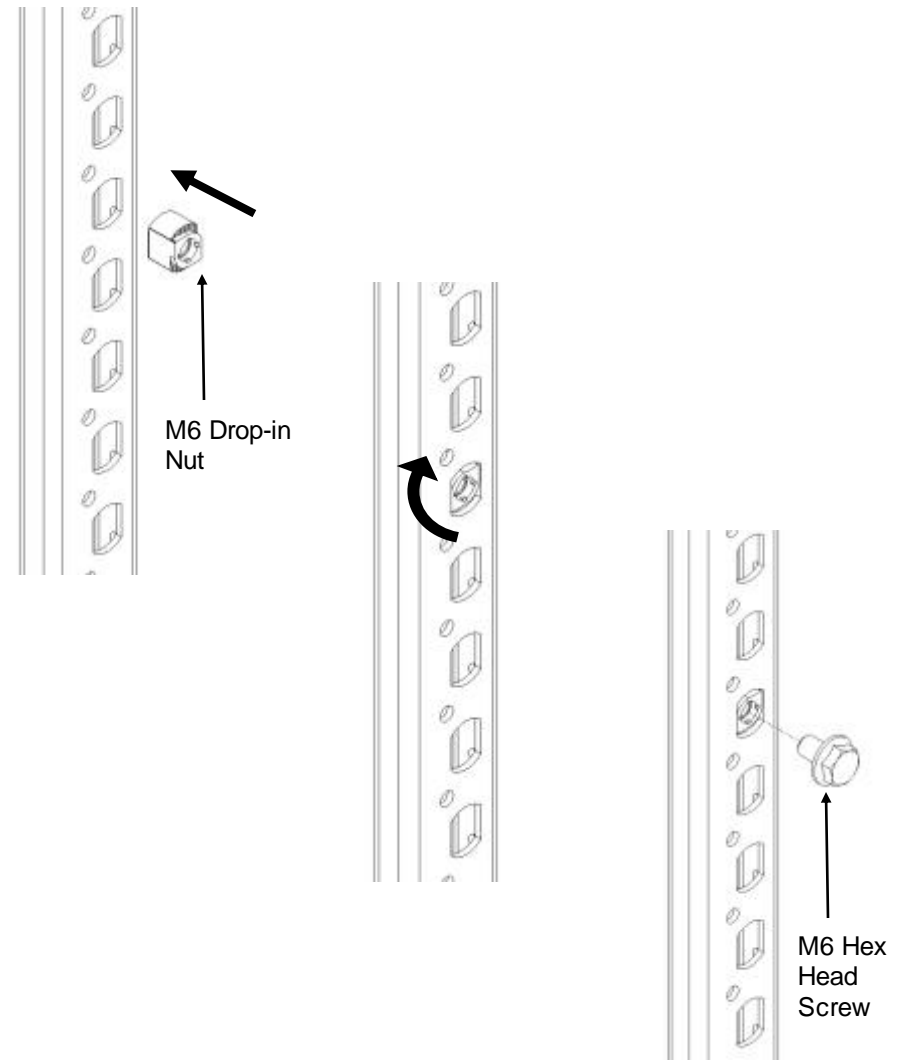

IIS-737942, 08/10/16, Rev. 1, CPI/JAG  
800-834-4969 (USA & Canada) • [www.chatsworth.com](http://www.chatsworth.com) • [techsupport@chatsworth.com](mailto:techsupport@chatsworth.com)  
For international phone numbers, see our website or contact CPI Tech Support.

*This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.*