

Installation Instructions

RMR ENCLOSURE MOUNTING BRACKET KIT

Safety Information



WARNING: Improper use of this product or failure to follow these instructions may result in equipment damage, personal injury, or death. Read and understand all instructions for proper installation and use of this product.



WARNING: Before loading equipment in the cabinet, be sure all parts and hardware are properly installed and tightened.

Intended Use


The RMR Enclosure Mounting Bracket Kit is used to fully meet Type 4 protection requirements on outdoor rated enclosures with mounting holes that penetrate the enclosure.

Tools Required

M13 Socket Driver


Included Hardware

- (6) M8 Serrated Flange Hex Nut
- (2) Top Wall-mounting Brackets (with hole)
- (2) Bottom Wall-mounting Brackets (with slot)
- (4) M8 Sealing Washers (included in Enclosure hardware kit)
- (4) M8 Lag Screws (included in Enclosure hardware kit)

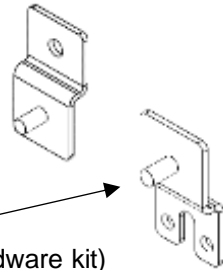

Assembly Sequence

1. Attach brackets to Enclosure through mounting holes using included M8 nuts and sealing washers. Rubber side of washer goes against enclosure. Tighten nuts to 14.9 in-lb (1.69 N-m). Note location and orientation of top and bottom brackets.
2. Determine location of Enclosure on wall.
3. Use the Enclosure as a template or measure the proper locations and drill pilot holes for lag screws.
4. Hold enclosure flush against wall and install lag screws.
Note: Bottom lag screws may be installed and used to support enclosure during installation of top lag screws.

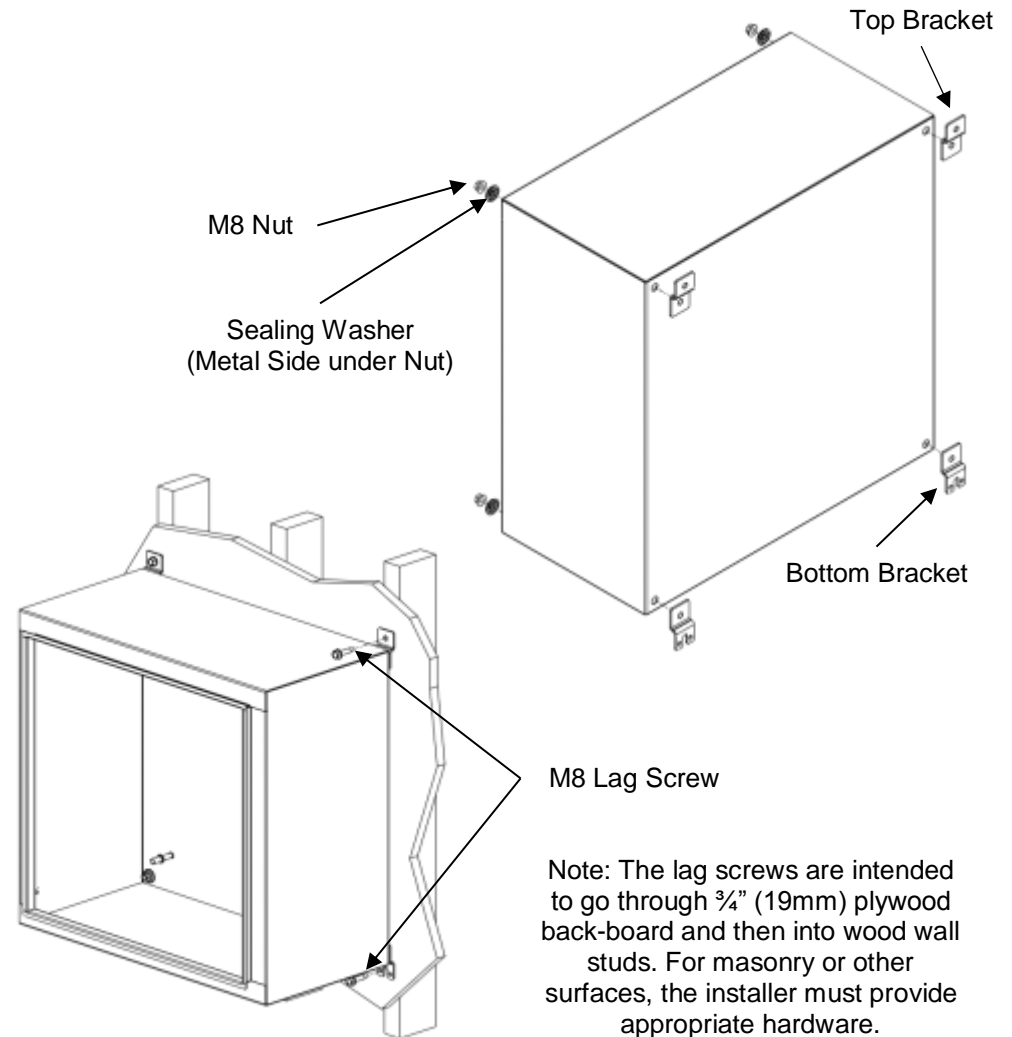

IIS-738091, 03/09/2017, Rev. 1, CPI/PEH

800-834-4969 (USA & Canada) • www.chatsworth.com • techsupport@chatsworth.com

For international phone numbers, see our website or contact CPI Tech Support.

This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.