

Installation Instructions

EF-Series EuroFrame™ Gen 2 Four-Point Shelf

Tools Required

10mm Wrench
#2 Phillips screwdriver

Included Parts

8 each	6 each	8 each
M6 x 16mm Screw	M6 Cage nut	M6 x 10mm Screw

Installation

1. Adjust to the depth by 4 mounting bracket, then use M6 x 10 screw to fix. See figure 1.
2. Install 8 M6 cage nuts to the same "U" of the mounting rail, then put shelf in and use M6 x 16mm screw to fix. See figure 2.

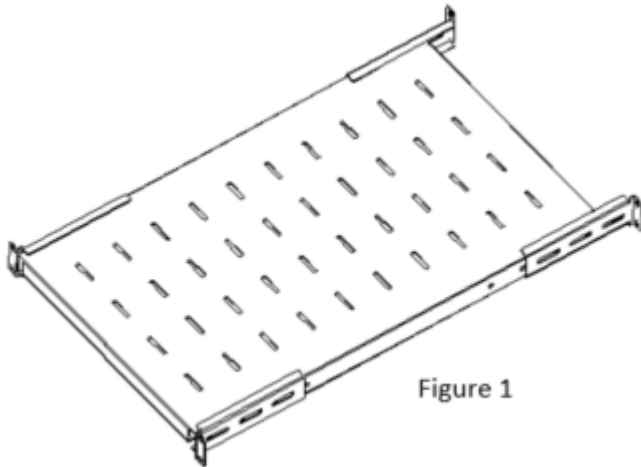


Figure 1

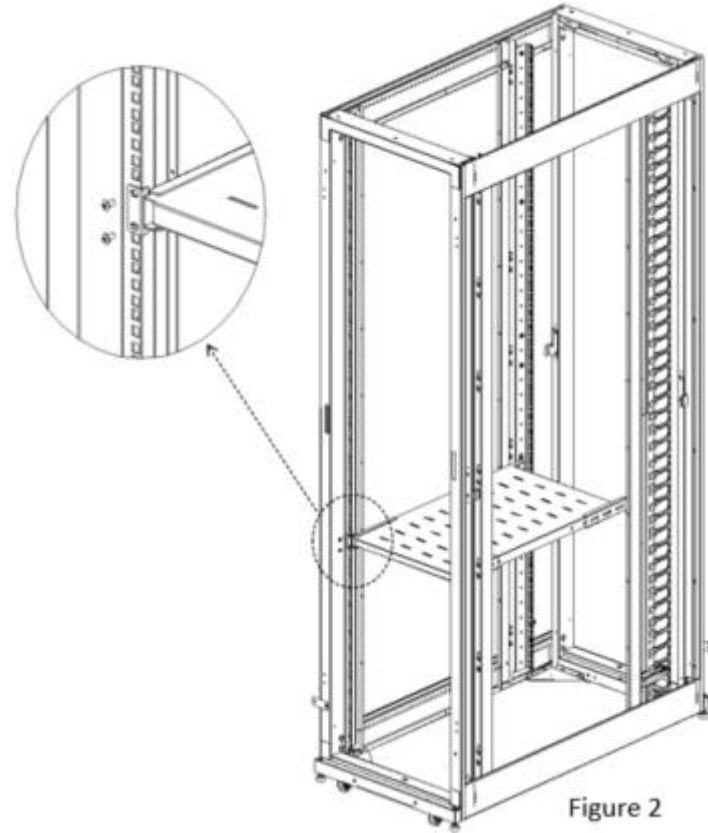


Figure 2