

Installation Instructions

RMR 800 MM W EQUIPMENT RAILS

Safety Information



WARNING: Improper use of this product may lead to serious injury. Read and understand all instructions for proper installation and use of this product.

Tools Required

13mm socket wrench


Included Hardware

(4) M8 Hammer Head Bolt

(4) M8 Serrated Flange Nut

Assembly Sequence

1. Insert M8 Hammer Head Bolt into Double-D Cam Hole on top and bottom frame depth members at desired location for equipment rail. Rotate M8 Hammer Bolt 90 degrees to engage frame.
2. Install equipment rail onto M8 Hammer Head bolts and frame using M8 serrated flange nuts (torque 372 IN-LB [42 N-M]).
3. Only if high load rating slides are installed, attach the equipment rail to the slide using M8 Hammer Head Bolt and serrated flange nuts included with slide assembly.

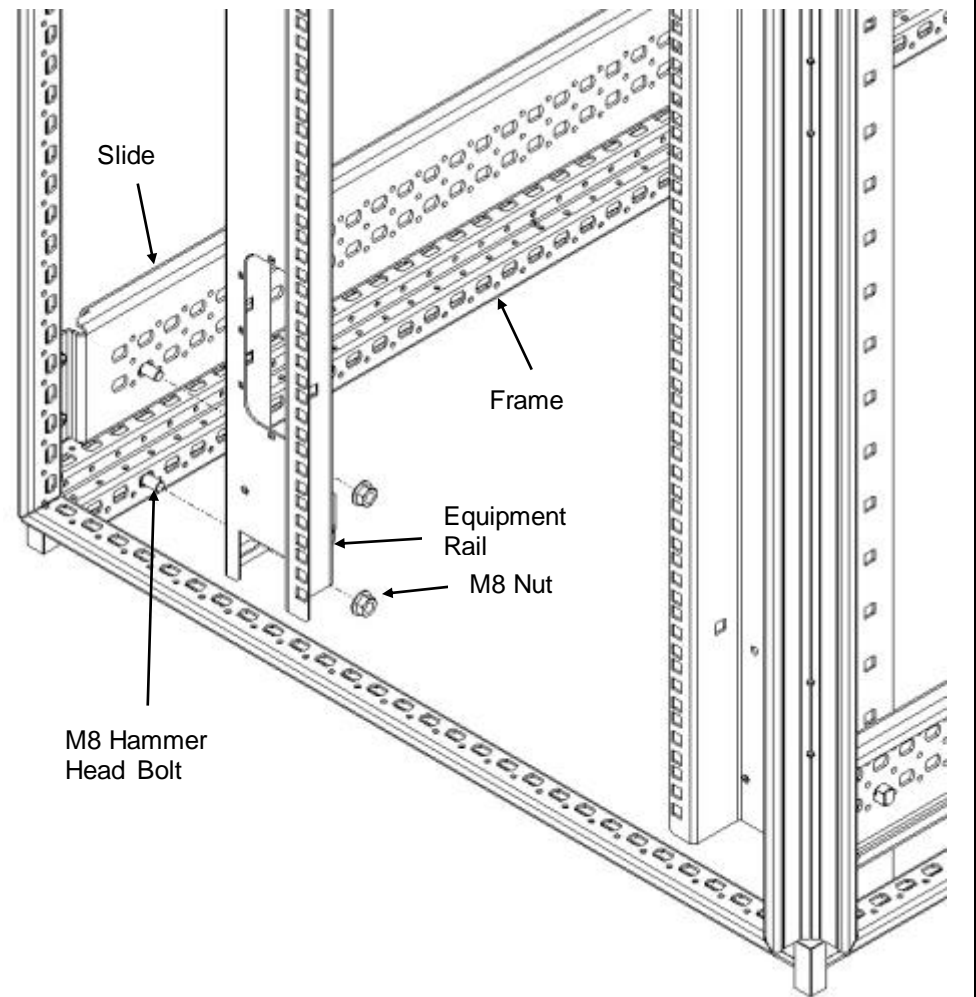

IIS-737772, 07/21/16, Rev. 1, CPI/JAG

800-834-4969 (USA & Canada) • www.chatsworth.com • techsupport@chatsworth.com

For international phone numbers, see our website or contact CPI Tech Support.

This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.