

Installation Instructions

RMR HAMMER BOLT HARDWARE KIT

Safety Information



WARNING: Improper use of this product may lead to serious injury. Read and understand all instructions for proper installation and use of this product.

Tools Required


13mm socket wrench

Included Hardware

(20) M8 Hammer Head Bolt
(20) M8 Serrated Flange Nut

Assembly Sequence

1. Insert M8 Hammer Head Bolt into Double-D Cam Hole on frame member at desired location.
2. Rotate M8 Hammer Bolt 90 degrees to engage frame.
3. Install accessory onto M8 Hammer Head Bolt using M8 Serrated Flange Nut.

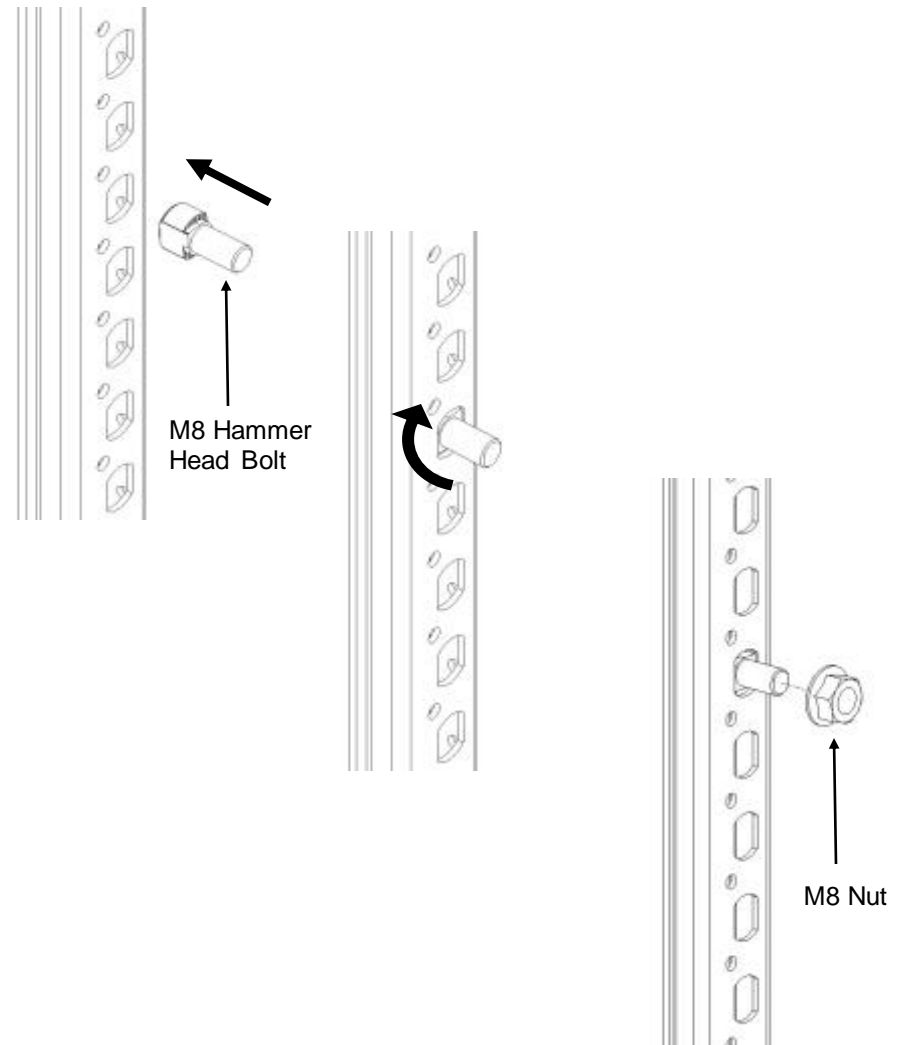

IIS-737941, 08/10/16, Rev. 1, CPI/JAG
800-834-4969 (USA & Canada) • www.chatsworth.com • techsupport@chatsworth.com
For international phone numbers, see our website or contact CPI Tech Support.

This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.