

# Installation Instructions

## RMR ENCLOSURE DRAIN KIT

### Safety Information



**WARNING:** Improper use of this product or failure to follow these instructions may result in equipment damage, personal injury, or death. Read and understand all instructions for proper installation and use of this product.

### Intended Use

The Drain Kit is used to meet drain requirements of Type 2 and 3R environmental protection while still providing a barrier to entry into the enclosure by dirt and debris.

### Tools Required

10mm Socket Driver

### Included Hardware for Each Door


Drill

1/2" (12.7mm) Drill Bit

15mm and 18mm Wrench

### Assembly Sequence – Door Bonding

1. Mark hole location on bottom panel, in rear corner, 2" from side and 2" from rear.
2. Drill hole through enclosure. Remove burrs and debris from around hole.
3. Insert threaded body of drain through hole (with drain body on outside of enclosure).
4. Install retaining nut (on inside of enclosure) with drain cutouts towards face of enclosure.
5. Use wrench to tighten nut and create full seal. Do not overtighten.

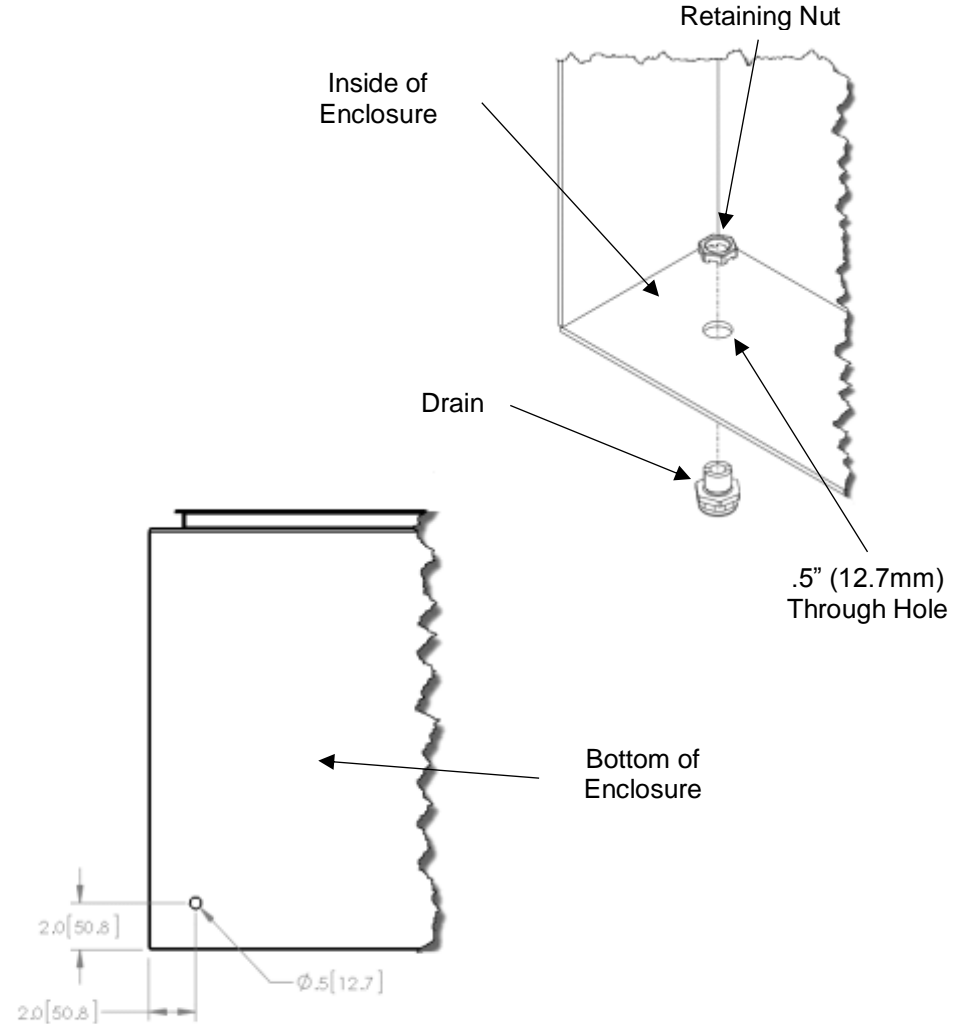

IIS-738085, 03/27/2017, Rev. 1, CPI/PEH

800-834-4969 (USA & Canada) • [www.chatsworth.com](http://www.chatsworth.com) • [techsupport@chatsworth.com](mailto:techsupport@chatsworth.com)

For international phone numbers, see our website or contact CPI Tech Support.

*This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.*