


## TOOLS REQUIRED

#2 Screwdriver or 5/16" Nut driver

## INSTALLATION

1. Mount each bracket to the raised bosses on the cabinet rear panel using four 10-32 x 5/16" hex head screws. Note the left and right hand orientation of the brackets.

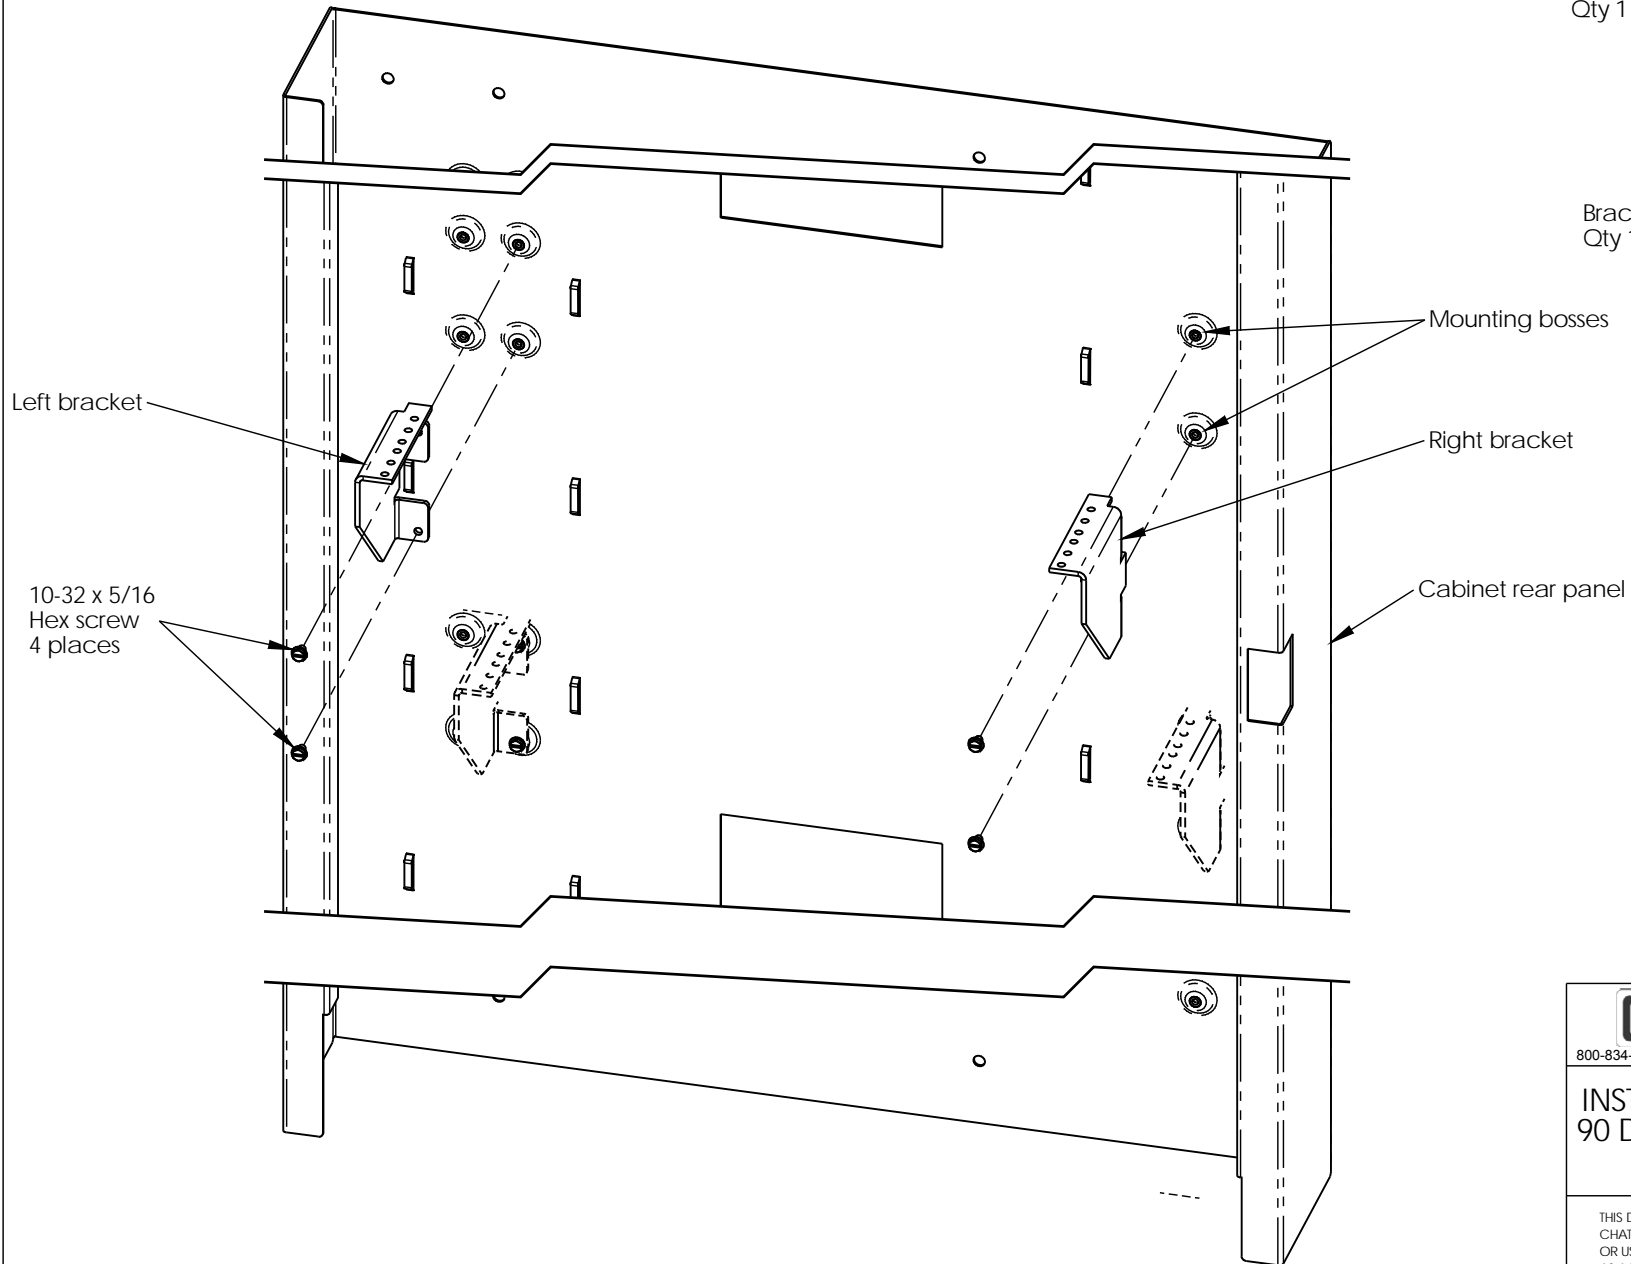


## PARTS INCLUDED

SHEET 1


10-32 X 5/16 Hex head screw  
Qty 5



Bracket, left  
Qty 1

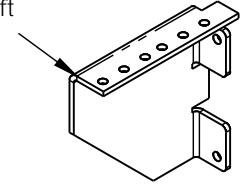

Bracket, right  
Qty 1

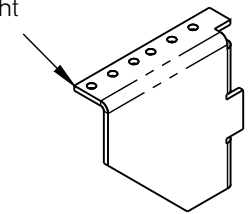

**CPI** CHATSWORTH PRODUCTS, INC.

800-834-4969 techsupport@chatsworth.com www.chatsworth.com

INSTALLATION INSTRUCTIONS,  
90 DEG EQUIPMENT BRACKET,  
CUBE IT CABINET

THIS DRAWING CONTAINS INFORMATION PROPRIETARY TO CHATSWORTH PRODUCTS, INC. ANY REPRODUCTION DISCLOSURE OR USE OF THIS DRAWING IS EXPRESSLY FORBIDDEN EXCEPT AS AGREED TO IN WRITING BY CHATSWORTH PRODUCTS, INC.