

Installation Instructions

FLOOR SUPPORTED CUBE-IT HORIZONTAL WIRE MANAGER

Safety Information



WARNING: Improper use of this product may lead to serious injury. Read and understand all instructions for proper installation and use of this product.

Tools Required


#2 Phillips Screw Driver

Included Hardware

- (2) M6 Panhead Screw
- (4) M6 Serrated Washer
- (2) M6 Klik Nut

Assembly Sequence

1. Install the M6 Klik Nut in the accessory hole on the mounting rail rear flange at the selected height.
2. Attach the Horizontal Wire Manager using the M6 screw and serrated washers for grounding contact as shown. For easier access, install from rear.
3. Repeat step 2 for opposite side.

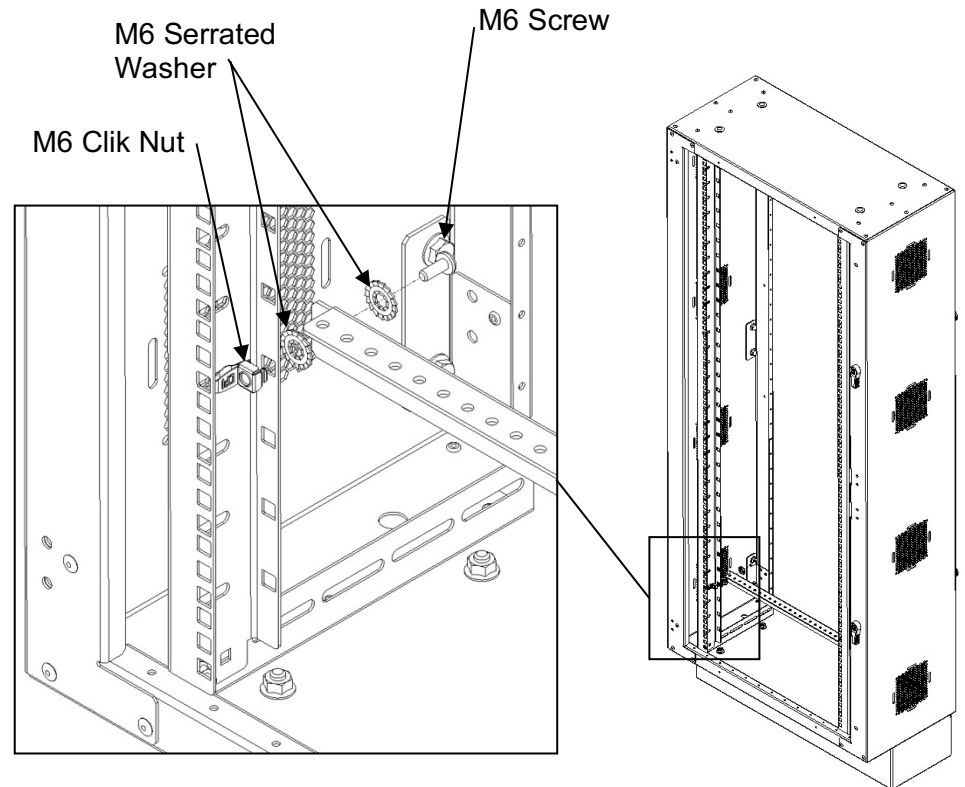

IIS-739955, 9/12/18, Rev. 1, CPI/JAG
800-834-4969 (USA & Canada) • www.chatsworth.com • techsupport@chatsworth.com
For international phone numbers, see our website or contact CPI Tech Support.

This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.