

Installation Instructions

VersaEdge™ Wall-Mount Cabinet Pivoting Patch Panel



WARNING: Improper use of this product may lead to serious injury. Read and understand all instructions for proper installation and use of this product.

Included Hardware:

None

Tools Required:

#2 Phillips Screwdriver

Installation Instructions

The Pivoting Patch Panel is installed onto the Rear Chassis (Fig. 1) using the M6 Clik-Nut Hardware Kit that is included with the Cabinet (76543-001). The rails pivot in order to provide access to the backside of patch panels.

1. Install the Pivoting Patch Panel onto the Rear Chassis in the desired location, using the M6 Quick Release Nuts and M6 Screws and a #2 Philips Screwdriver.
2. Mount 2 RMUs of Patch Panels to the rails using the included hardware.
3. To access the rear of the patch panels, rotate the top of the equipment 90 degrees towards the front of the cabinet. Once finished, rotate the equipment back to the initial orientation.

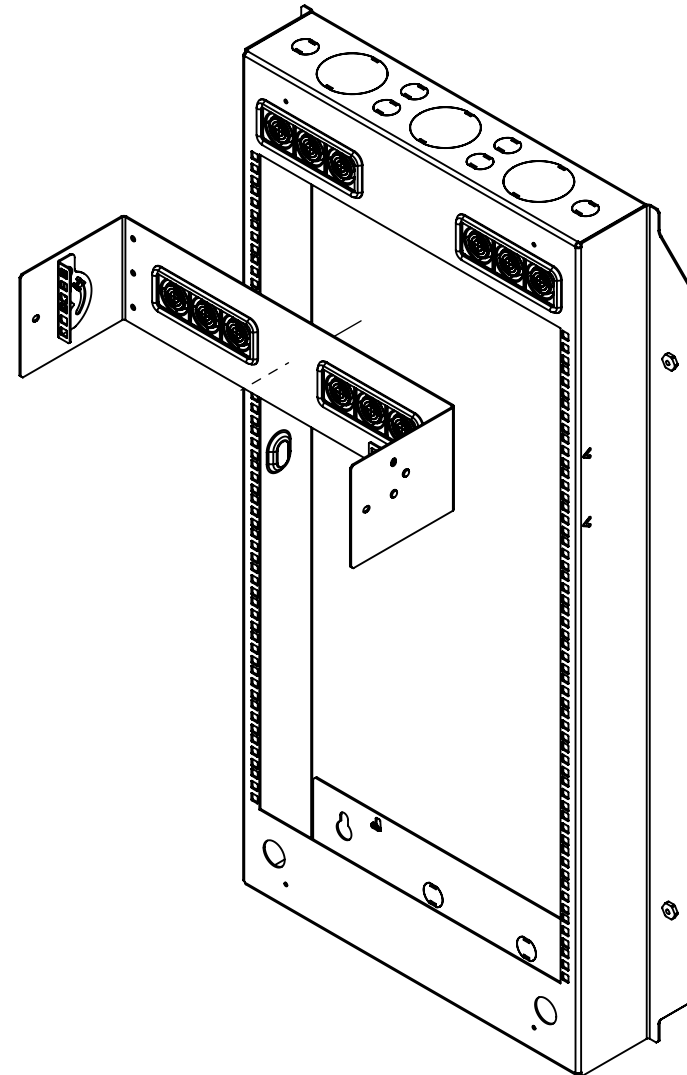


Fig. 1