Installation Instructions

CABINET EXTENSION, ORV3

WARNING: Improper use of this product may lead to serious injury. Read and understand all instructions for proper installation and use of this product.

Included Hardware:
M8 X20mm Hex Head Screw, 8 ea.
M12 X30mm Hex Head Screw, 3 ea.

Tools Required:
M13 Socket Driver
M19 Socket Driver

Installation Instructions

1. Align the Cabinet Extension with the cabinet frame (Fig. 1).

2. Fasten the extension to the cabinet frame using M8X20mm Screws into the extension verticals (Fig. 1, detail A).

3. Secure the extension using M12X30 Screws into the extension bottom lateral (Fig. 1, detail B).

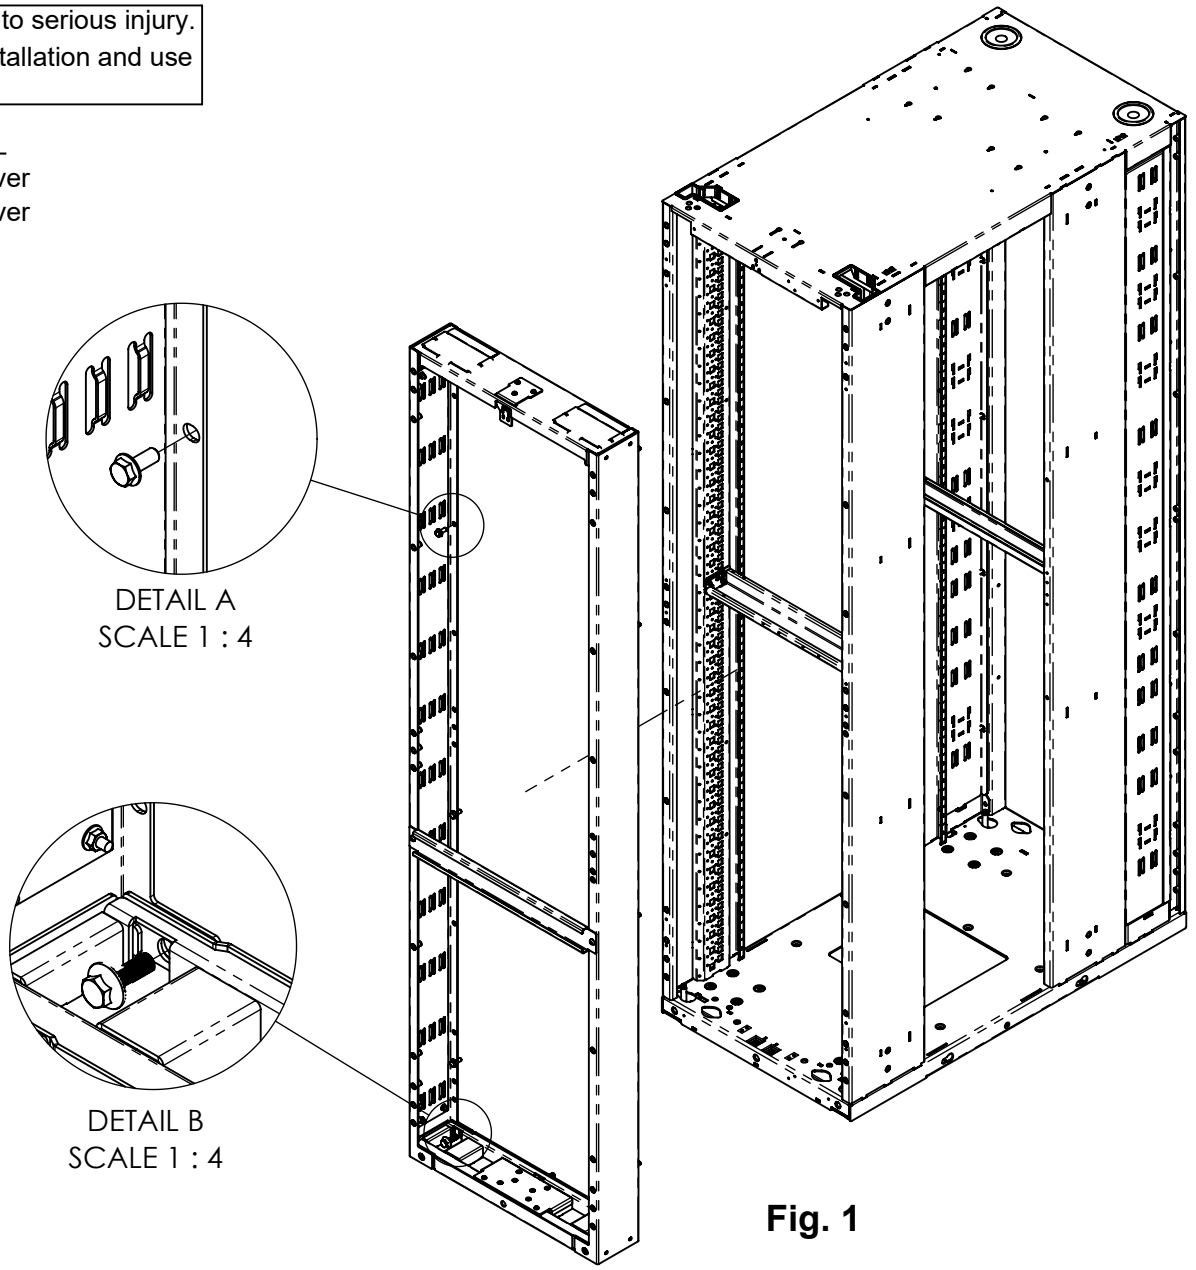


Fig. 1

This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.