Installation Instructions

BOTTOM OF ROW CONTAINMENT (BORC), ORV3

WARNING: Improper use of this product may lead to serious injury. Read and understand all instructions for proper installation and use of this product.

Tools Required:
M19 Socket Driver

Installation Instructions
The BORC panel (Fig.1) attaches to the bottom panel on the rear of the cabinet (Fig. 2).

1. Align the BORC panel with the M12 weldnuts in the bottom of the frame and partially tighten the M12 x 30 screws (M12 screws not included in this assembly) (Fig. 2).

2. Adjust the position of the BORC panel such that the bottom edge of the panel contacts the floor then tighten M12 screws to secure (Fig. 2).

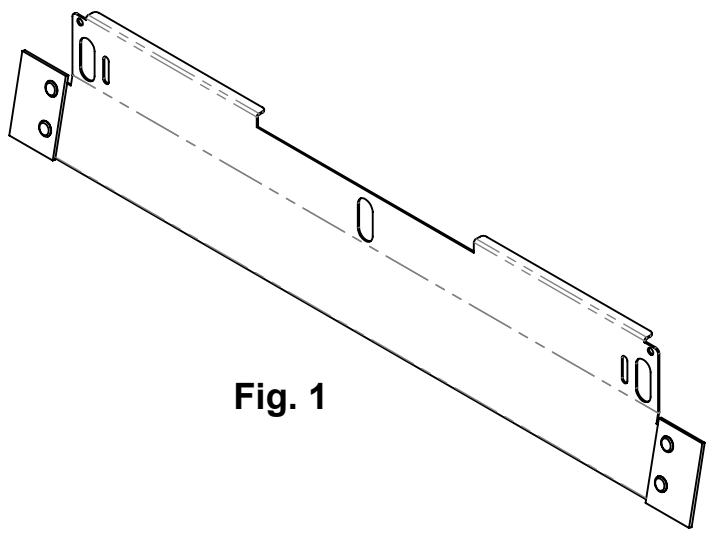


Fig. 1

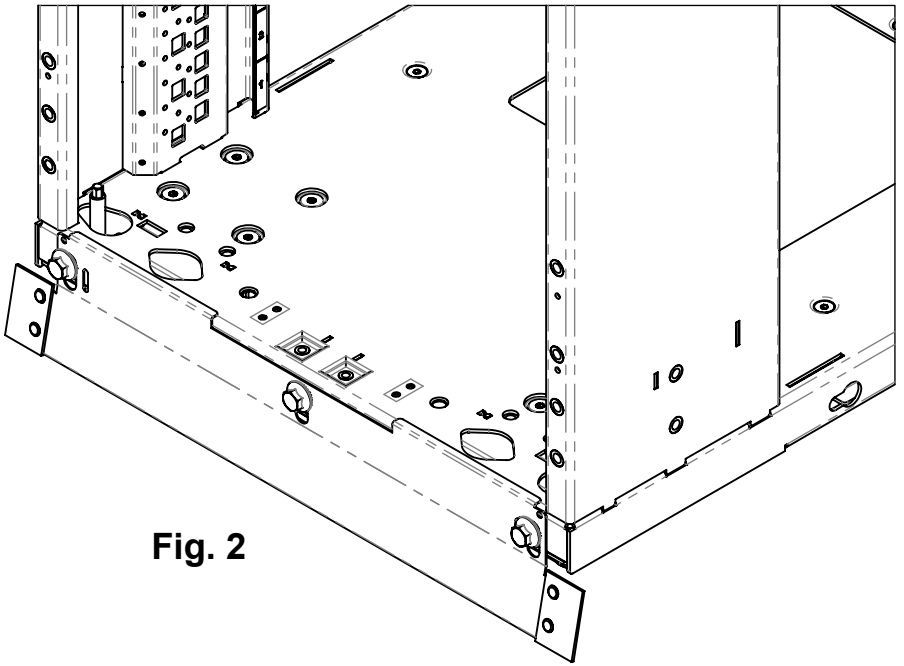


Fig. 2

This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.