Installation Instructions

VERTICAL CONTAINMENT, ORV3

WARNING: Improper use of this product may lead to serious injury. Read and understand all instructions for proper installation and use of this product.

Included Hardware:
M8 X16mm Screw, 8 ea.

Tools Required:
5mm Hex Driver

Installation Instructions

The Vertical Containment Seal (Fig.1) attaches to the rear cabinet frame (Fig. 2).

1. Align the Vertical Containment Seal with the mounting points on the rear of the cabinet frame (the longer seal pieces are the upper section, smaller pieces are the lower section) (Fig. 2).

2. Secure the seal using (2) M8 x16 screws per seal section (Fig. 2).


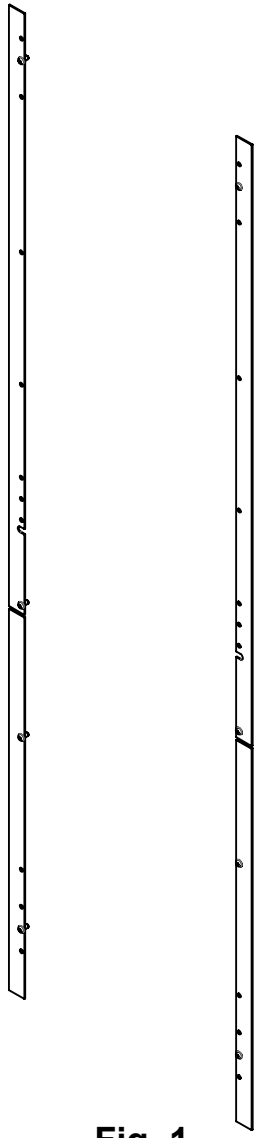


Fig. 1

This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.

VERTICAL CONTAINMENT, ORV3

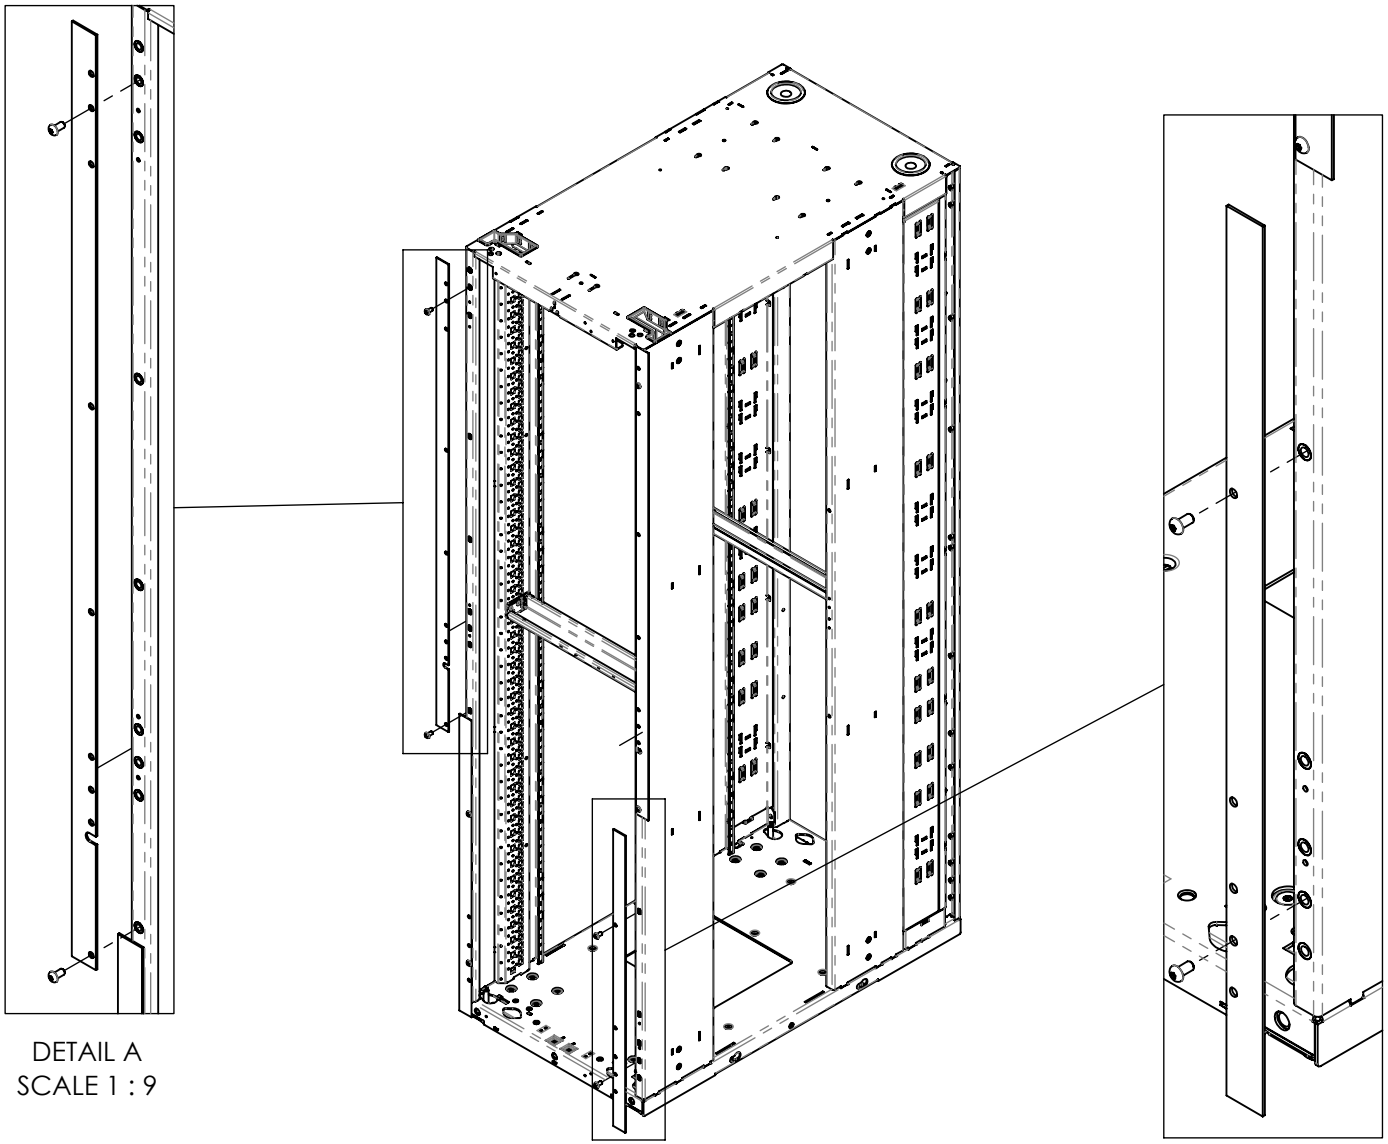

DETAIL A
SCALE 1 : 9

DETAIL B
SCALE 1 : 6

Fig. 2