
Installation Instructions

BONDING LOCATIONS, 1068D FRAME, ORV3

WARNING: Improper use of this product may lead to serious injury. Read and understand all instructions for proper installation and use of this product.

1. To utilize ground points, remove paint masking.

2. After removing paint masking, apply provided antioxidant to the unpainted surface.

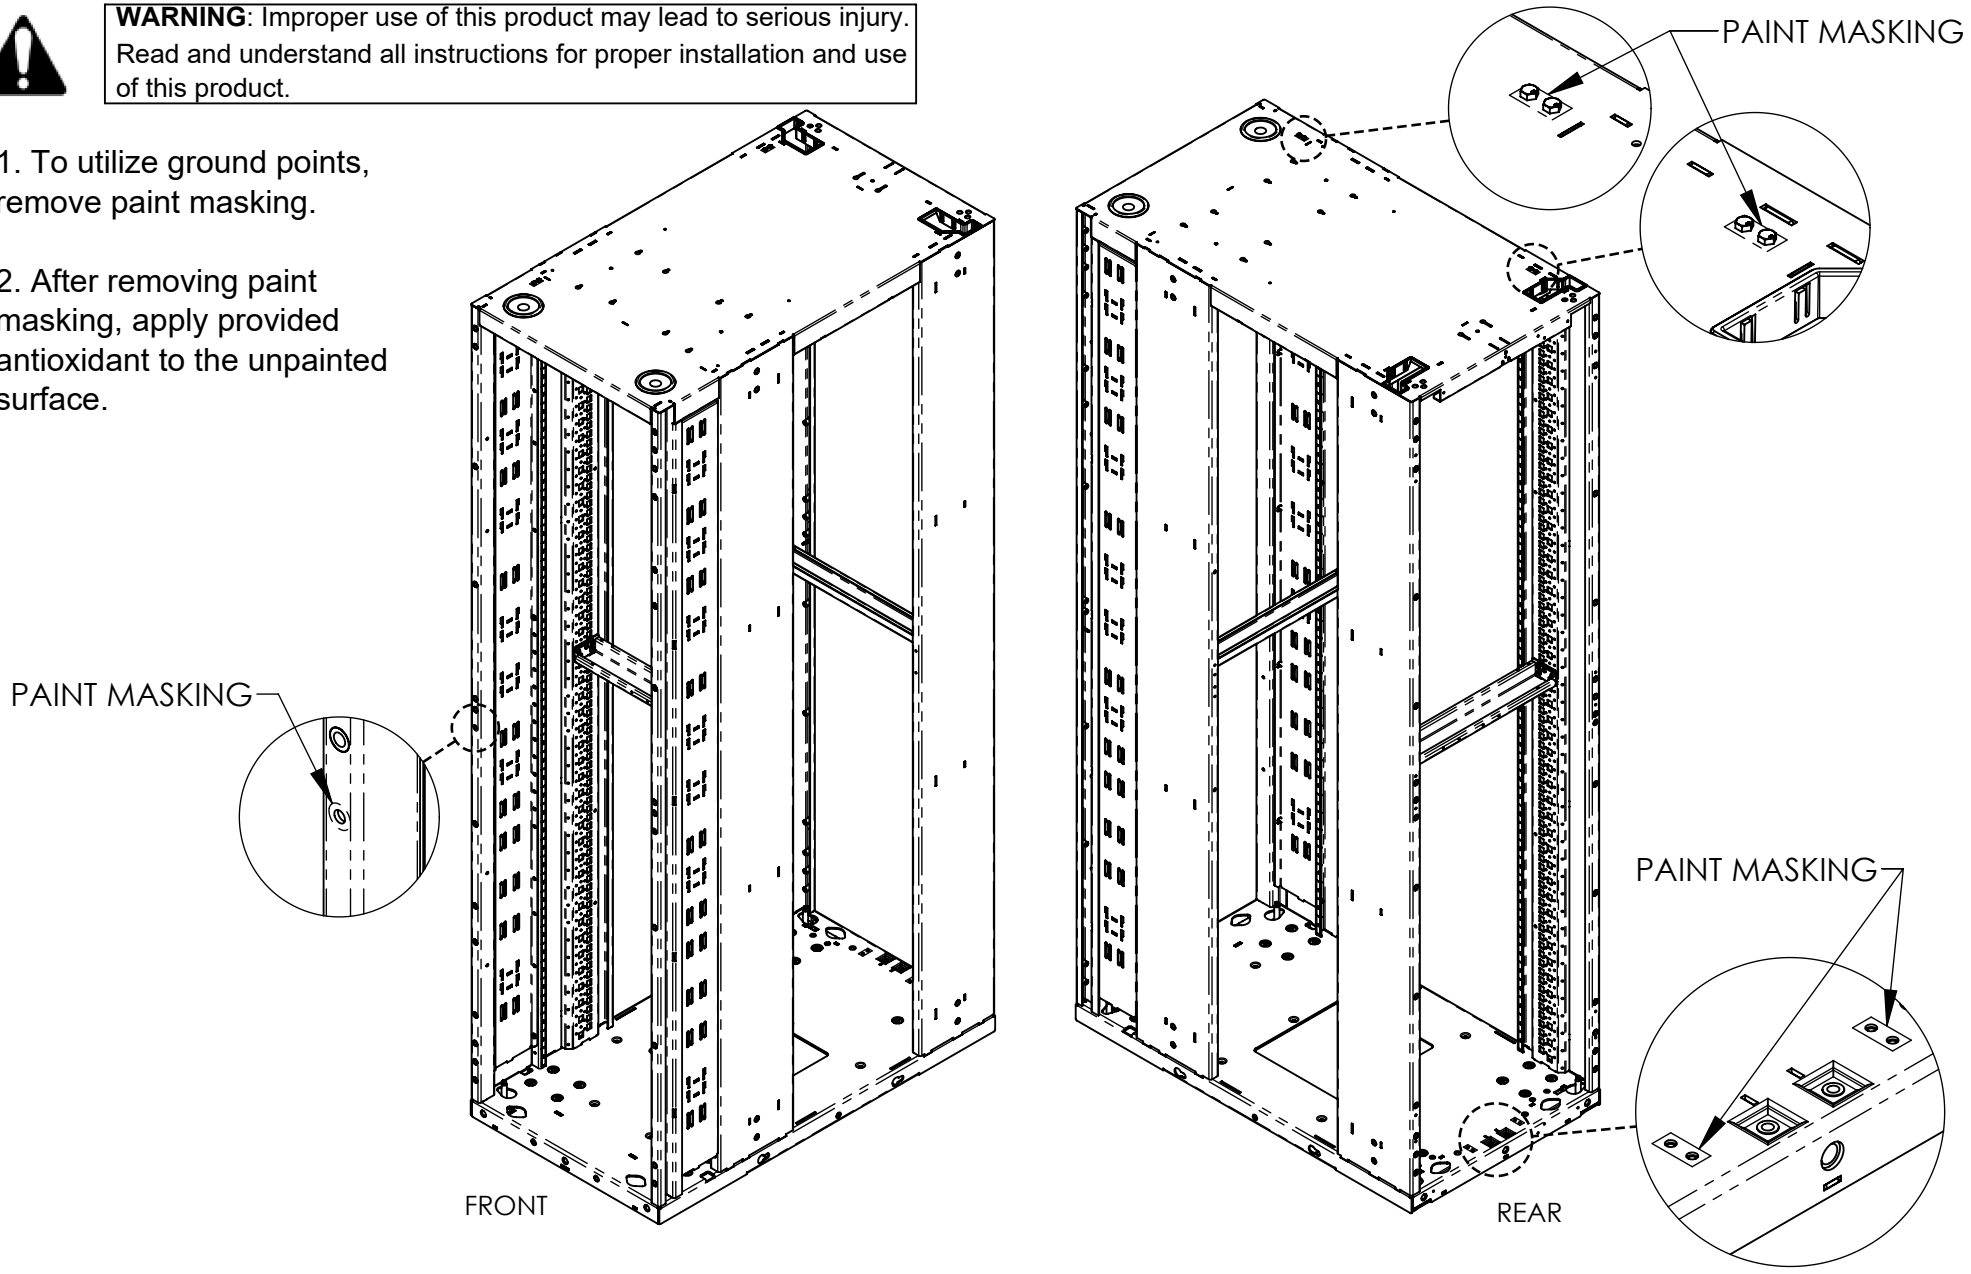

800-834-4969 (USA & Canada) • www.chatsworth.com • techsupport@chatsworth.com

For international phone numbers, see our website or contact CPI Tech Support.

This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.

Installation Instructions

BONDING LOCATIONS, 1068D FRAME, ORV3

1. Before installing a busbar, remove paint masking at the top rear interior face of the cabinet frame.

2. After removing paint masking, apply provided antioxidant to the unpainted surface.

