Installation Instructions

SIDE PANEL KIT, ORV3

WARNING: Improper use of this product may lead to serious injury. Read and understand all instructions for proper installation and use of this product.

Included Hardware:
M5 X12mm Torx Screw, 4 ea.

Tools Required:
T25 Torx Driver

Installation Instructions

1. Tab the Side Panel into the bottom of the cabinet frame and press the top of the panel into frame to engage the top latch (Fig. 2).

2. Secure each Side Panel using (2) M5 x12mm Torx Screws into the frame verticals (Fig. 2, detail A).


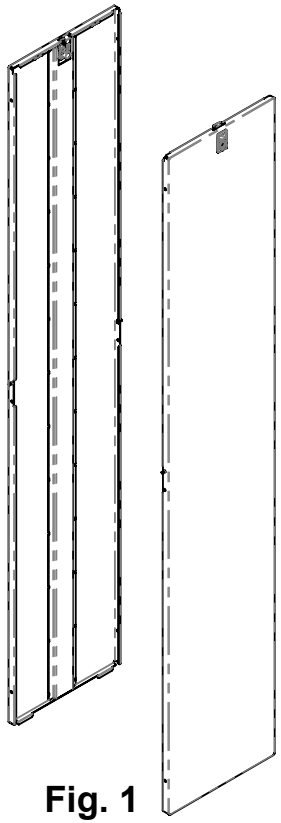


Fig. 1

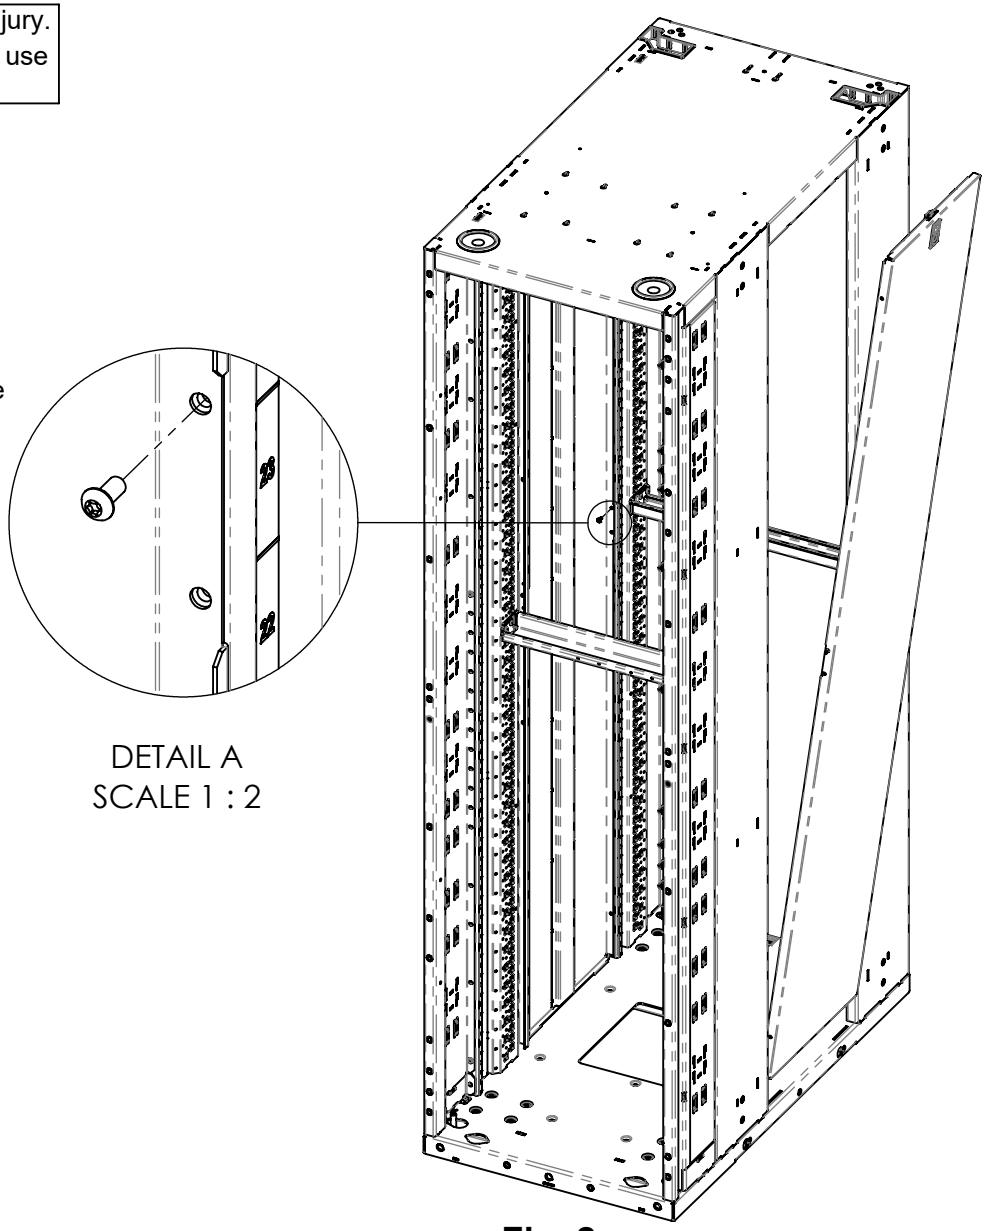

DETAIL A
SCALE 1 : 2

Fig. 2

This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.