# Installation Instructions

## TOP OF ROW CONTAINMENT (TORC), ORV3

**WARNING**: Improper use of this product may lead to serious injury. Read and understand all instructions for proper installation and use of this product.

Included Hardware:
M5 X12mm Flat Head Screw, 2 ea.
M5 Wingnut, 2 ea.

Tools Required:
T25 Torx Driver

Installation Instructions

The TORC assembly (Fig.1) includes a bottom panel that attaches to the cabinet frame and a top panel that attaches to the bottom panel studs (Fig. 2).

1. Align the TORC bottom panel with the rear top lateral of the cabinet frame and use the M5 X 12mm screws to secure (Fig. 3).

2. Install the TORC top brush panel aligning the panel on the bottom panel studs and securing with the M5 wingnuts (Fig. 4).

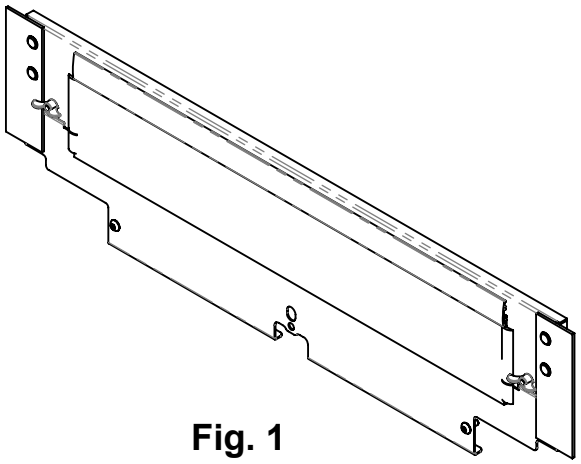


**Fig. 1**

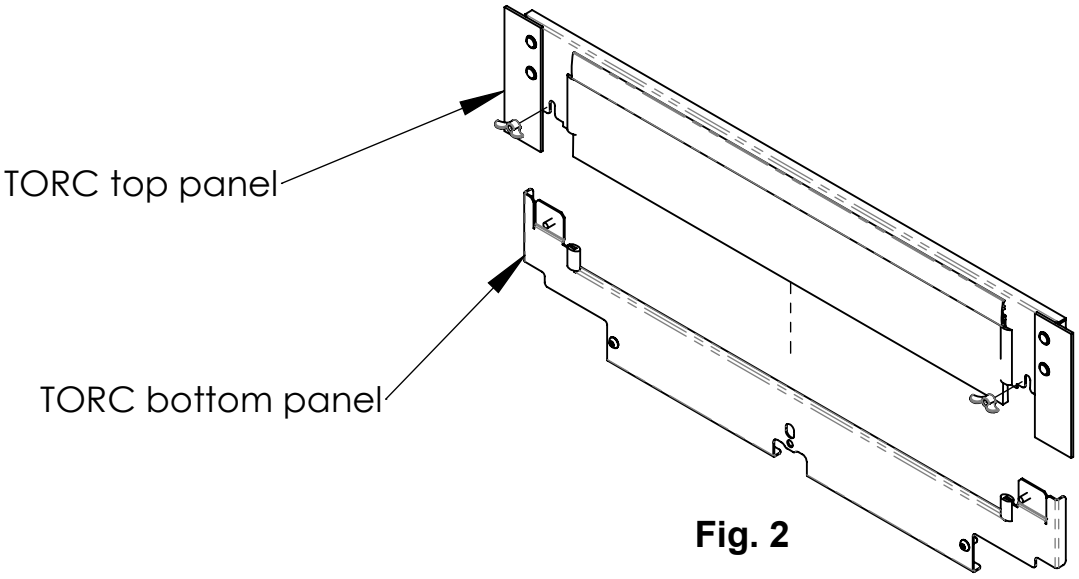



**Fig. 2**


*This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.*

# Installation Instructions

## TOP OF ROW CONTAINMENT (TORC), ORV3

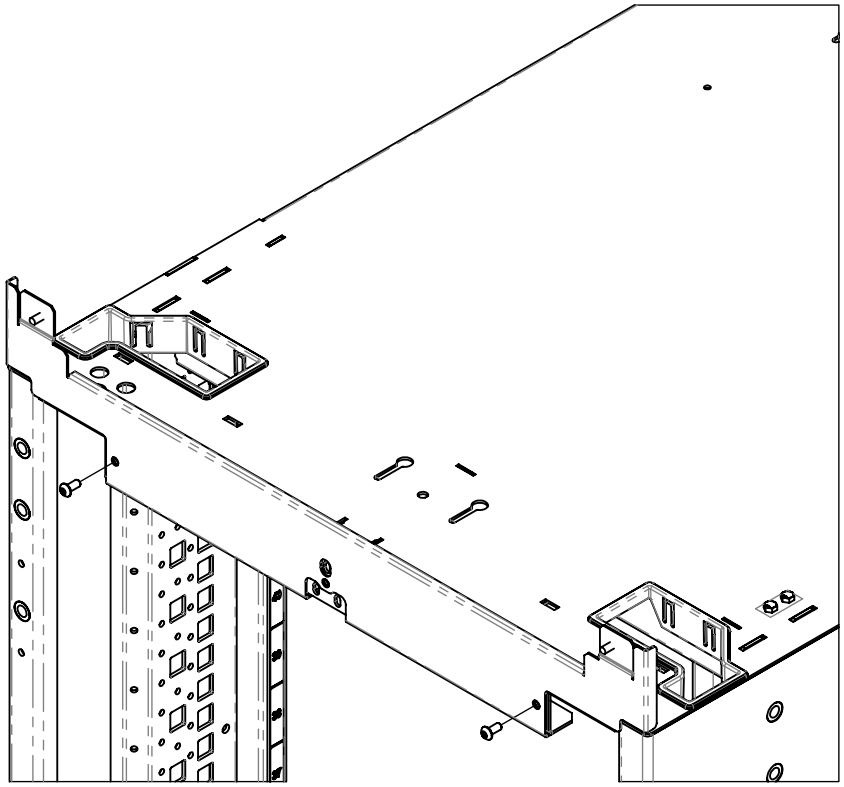


**Fig. 3**

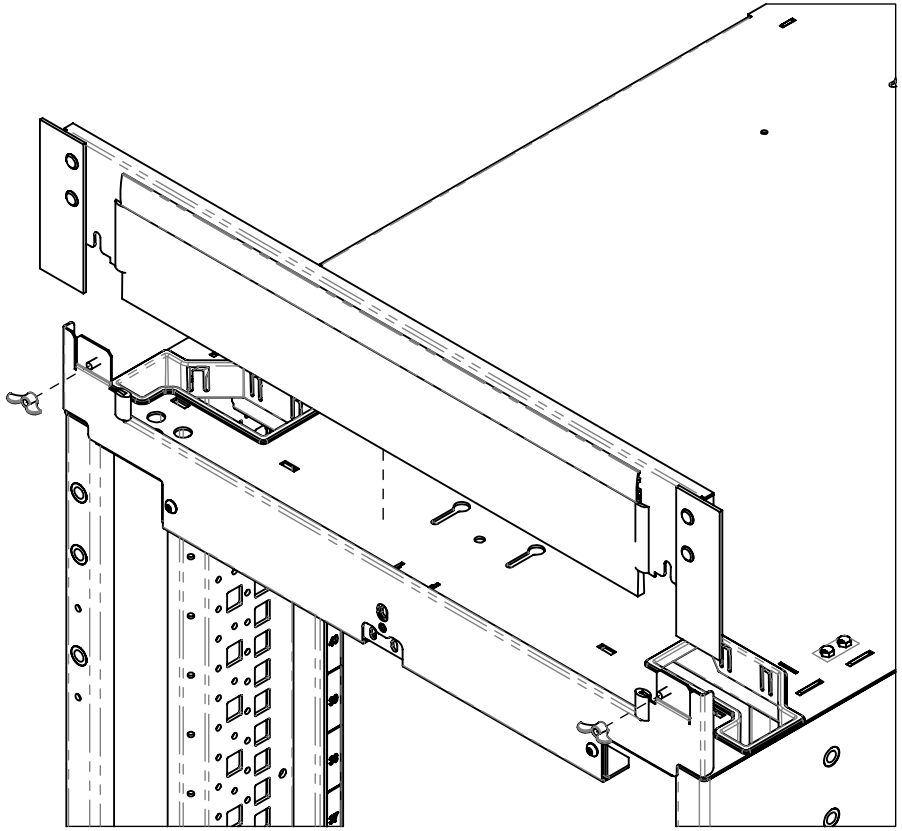


**Fig. 4**