Installation Instructions

19" EIA FULL HEIGHT RAILS, ORV3

WARNING: Improper use of this product may lead to serious injury. Read and understand all instructions for proper installation and use of this product.

Included Hardware:
M5 X12mm Torx Screws

Tools Required:
T25 Torx Driver

Installation Instructions
The Full Height EIA Rails (Fig.1) attach to the cabinet rails (Fig. 2).

1. Position the Full Height EIA Rails at the desired depth location in the cabinet. The top of the bracket is indicated by a punched arrow (Fig. 1, detail A).

2.Fasten the Full Height EIA Rails using M5 x12mm Torx Screws into the cabinet rails (Fig.2, detail B).


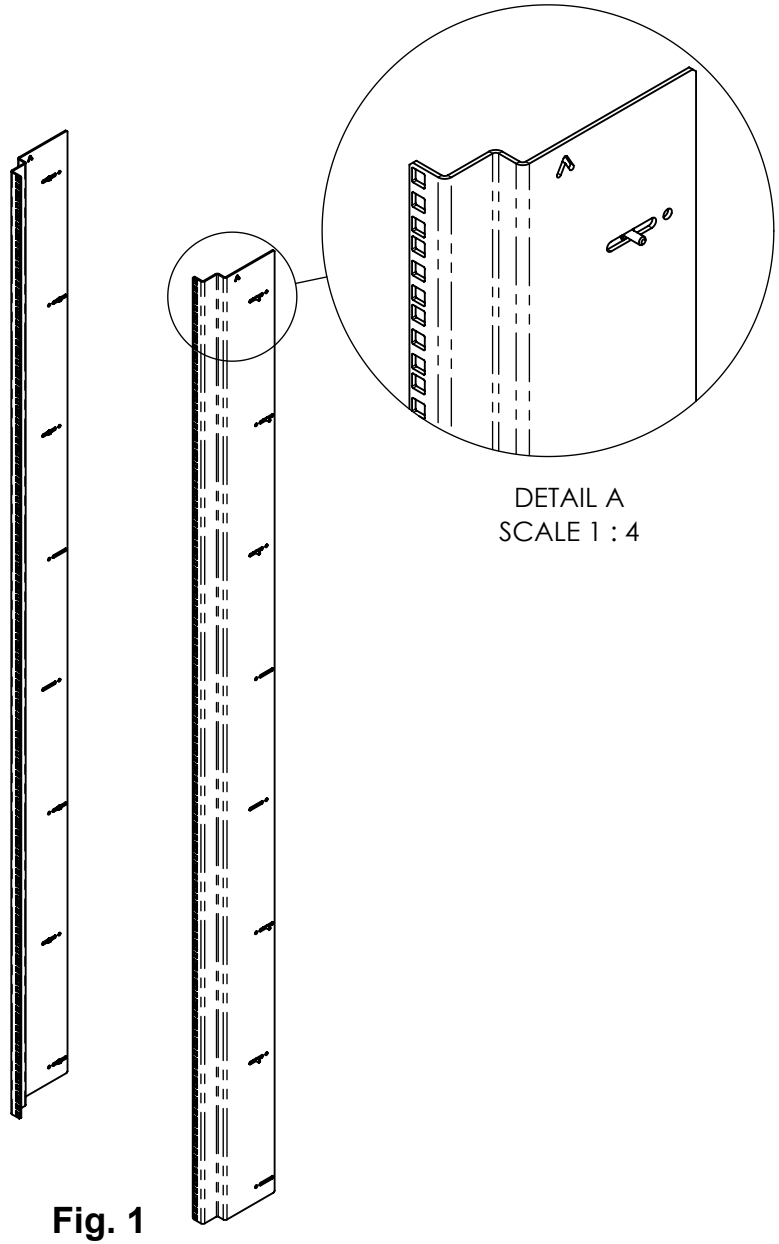


Fig. 1

CHATSWORTH PRODUCTS
800-834-4969 (USA & Canada) • www.chatsworth.com • techsupport@chatsworth.com
For international phone numbers, see our website or contact CPI Tech Support.
This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.

19" EIA FULL HEIGHT RAILS, ORV3

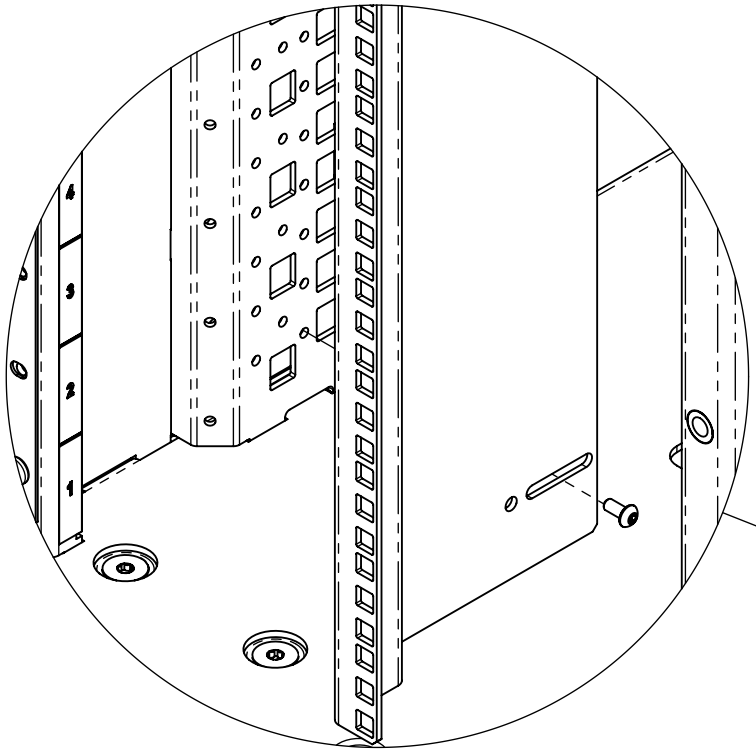

DETAIL B
SCALE 1 : 3

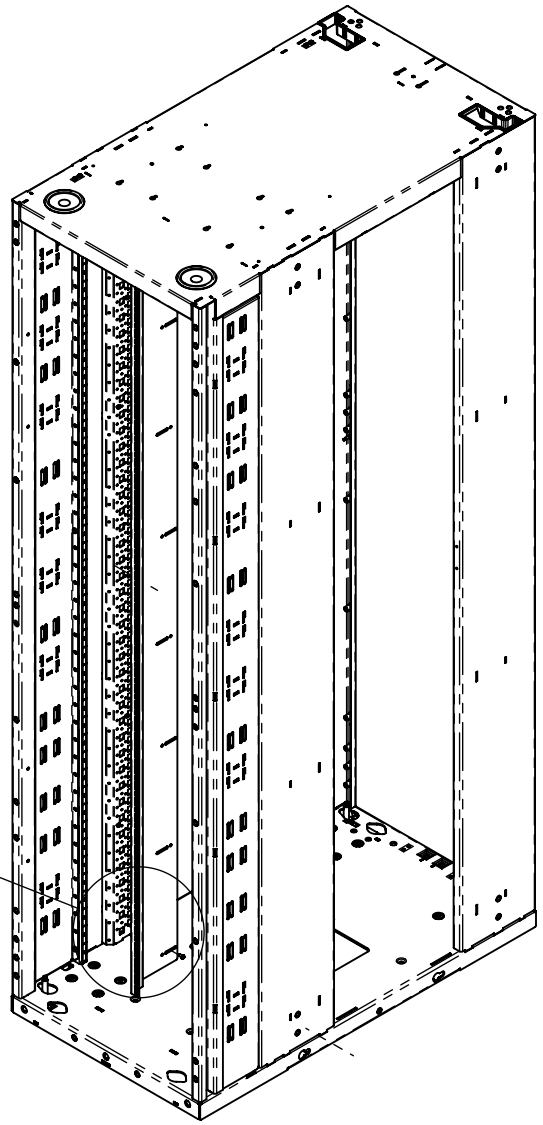


Fig. 2