Installation Instructions

VersaEdgeÊ Wall-Mount Cabinet Universal Accessory Panel

WARNING: Improper use of this product may lead to serious injury. Read and understand all instructions for proper installation and use of this product.

Included Hardware:
M5 Hex Nuts, 2 ea.
Slack Manager Kit spools, 4 ea.
Cable Bundle Swivels, 6 ea.

Tools Required:
8mm Socket Driver
#2 Philips Screwdriver

Installation Instructions

The Universal Accessory Panel installs onto the Rear Chassis using (2) M5 Hex Nuts. It is recommended to install the Universal Accessory Panel before installing the Equipment Rails.

1. Remove the grommets from the Rear Chassis.
2. Angle the Universal Accessory Panel and insert into the top of the Rear Chassis (Fig. 1).
3. Rotate the panel and rest the bottom onto the lances at the bottom of the Rear Chassis (Fig. 2).
4. There are studs towards the top of the Rear Chassis that should be inserted into the slots on the top of the panel. Using an 8mm Socket Driver, tighten the (2) M5 Hex Nuts onto the studs to fix the panel to the Rear Chassis (Fig. 3).
5. Install the included Slack Manager Kit spools using a #2 Philips Screwdriver and the included (8) screws. Note the different installation locations shown in Fig. 4 for large or small cable loops. Additional Slack Manager Kit spools (43056-001) may be purchased to allow for more versatility.
6. Install the included Cable Bundle Swivels in the desired locations by inserting into the rectangular slots and turning clockwise until tight.
7. A UPS Bracket (43048-X01) can also be installed using the included hardware at the top and/or bottom of the panel.

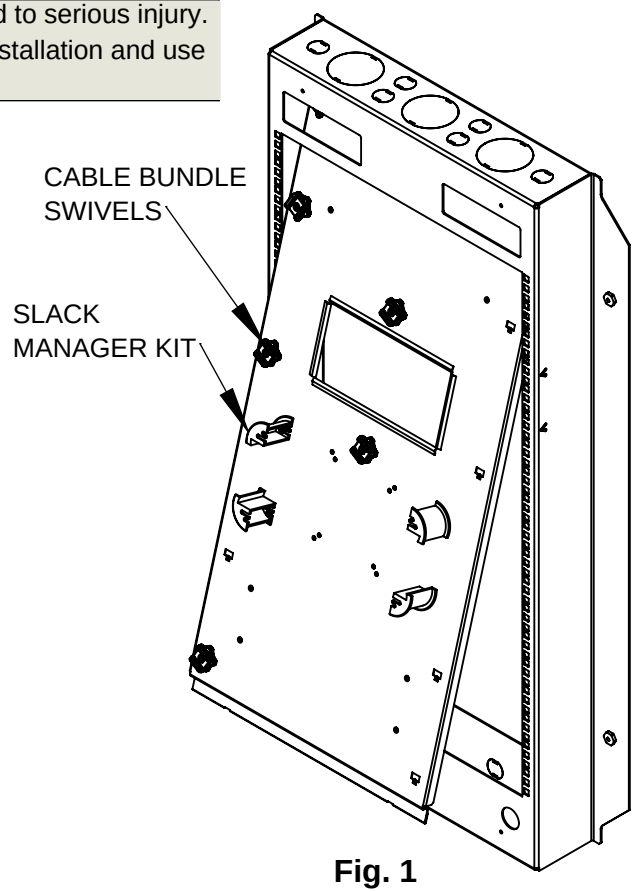

Fig. 1

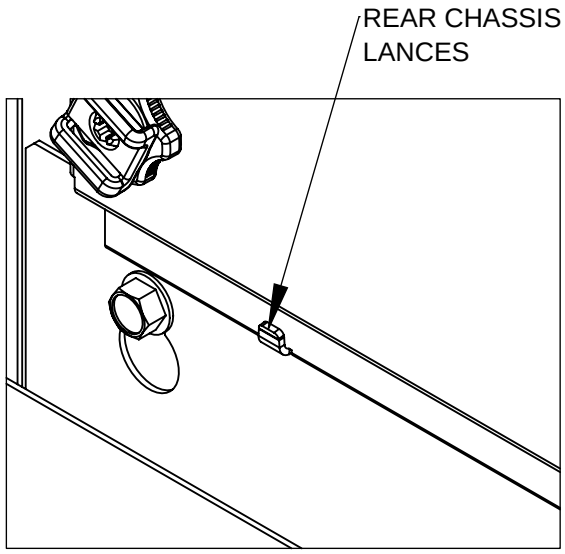

Fig. 2

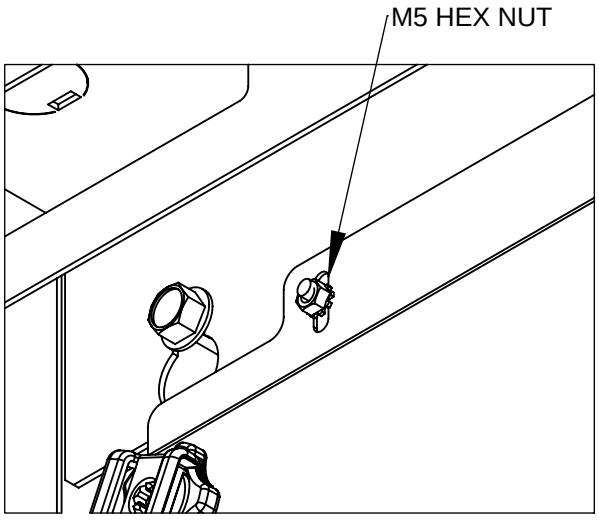

Fig. 3

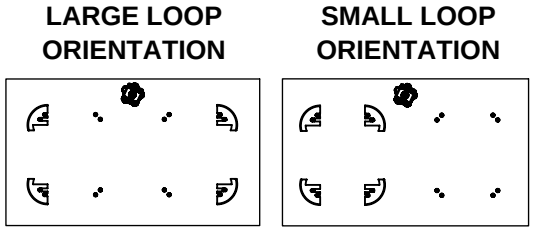

Fig. 4

This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.