Installation Instructions

VersaEdgeÊ Wall-Mount Cabinet Patch Panel Rails

WARNING: Improper use of this product may lead to serious injury. Read and understand all instructions for proper installation and use of this product.

Included Hardware:
M6 Carriage Bolts, 4 ea.
M6 Nuts, 4 ea.

Tools Required:
10mm Wrench
#2 Philips Screwdriver

Installation Instructions

The Patch Panel Rails are installed onto the Rear Chassis (Fig. 1) using the M6 Quick Release Nuts and M6 Screws that are included with the Cabinet (76543-001). The rails can be installed at an angle to give access to the backside of Patch Panels.

1. Install the rails onto the bracket in the desired orientation using the M6 Carriage Bolts and M6 Nuts with a 10mm Wrench. Both square-punched and 12-24 tapped holes are available depending on Patch Panel hardware used.
2. Install the Patch Panel Rails onto the Rear Chassis in the desired location using the M6 Quick Release Nuts and M6 Screws and a #2 Philips Screwdriver.
3. Mount 2 RMUs of Patch Panels to the rails using the included Patch Panel hardware.

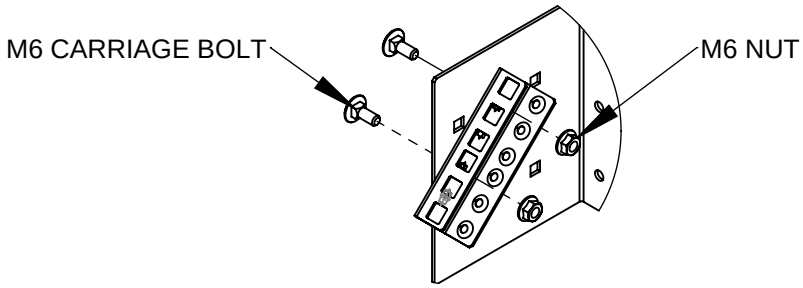

DETAIL A
SCALE 1 : 4

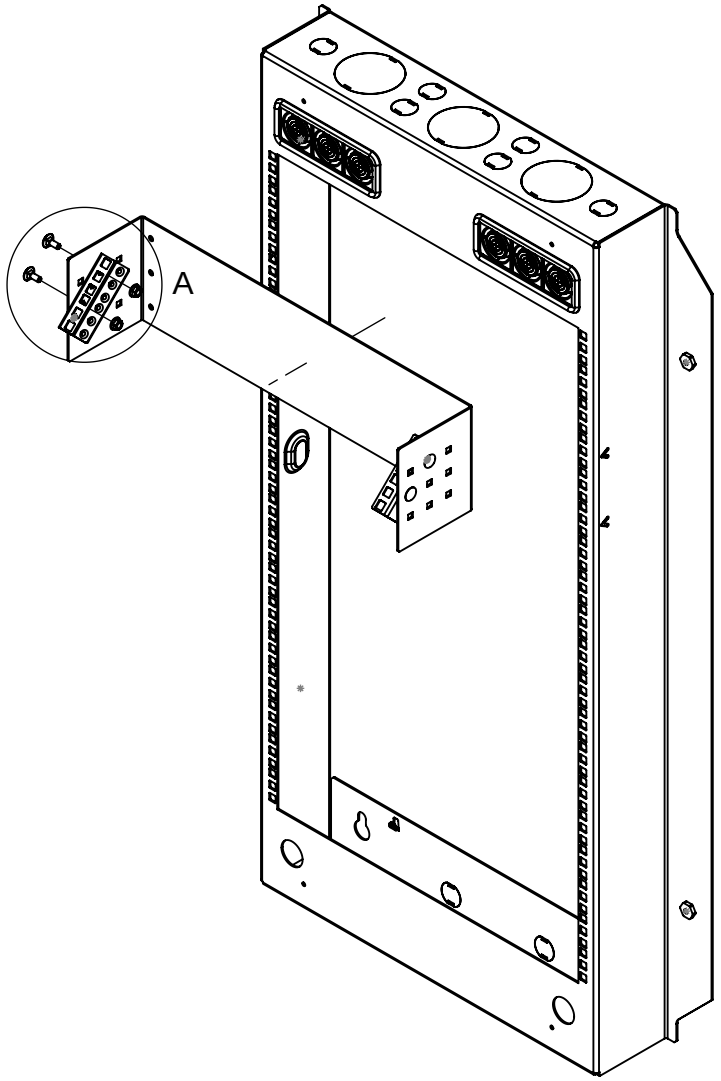

Fig. 1

This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.