

Installation Instructions

DISTRIBUTIONFRAME CABINET EQUIPMENT RAIL KIT

Safety Information




WARNING: Improper use of this product may lead to serious injury. Read and understand all instructions for proper installation and use of this product.

Included Hardware

6 each
M6X12 Phillips screw



6 each
M6 cage nuts

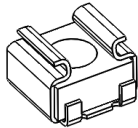

Tools Required

#2 Phillips screwdriver

Assembly Sequence

1. The equipment rail attaches to the cabinet slides (Figure 1).
2. Install cage nuts in the appropriate locations on each slide (example shown in Figure 2). Cage nuts are installed on the back side of the slides using a screwdriver or cage nut installation tool as shown in Figure 3.

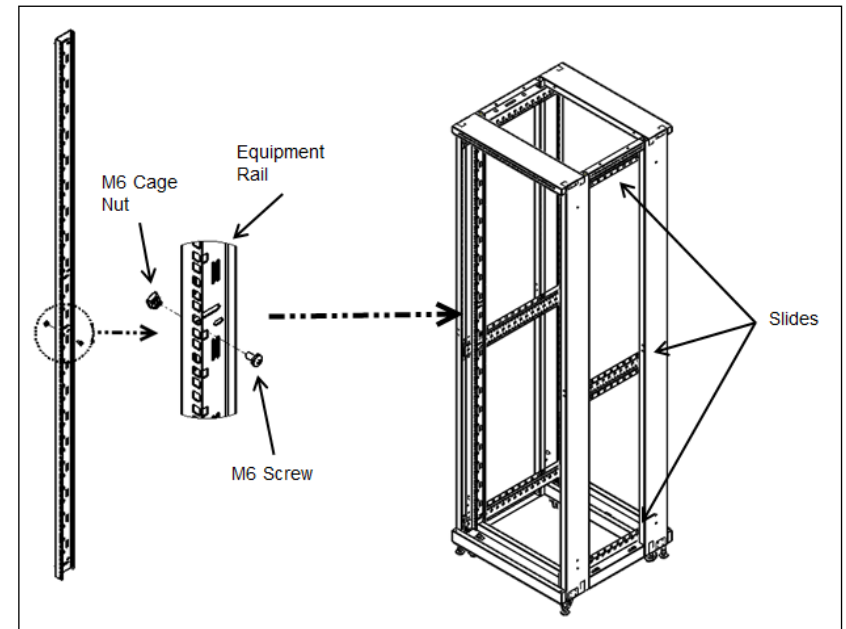


Figure 1

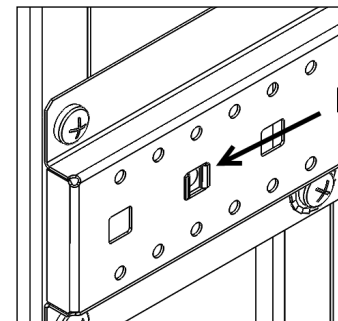


Figure 2

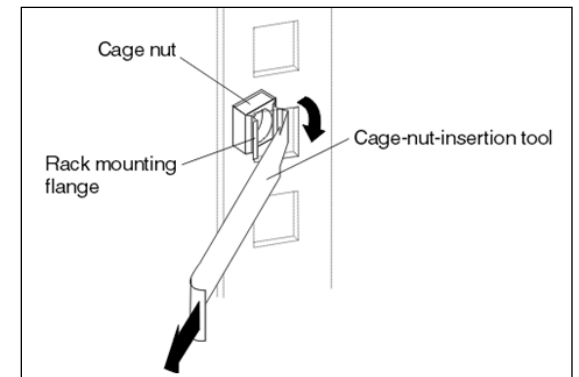


Figure 3



IIS-725858, 06/24/2014, Rev. 1, CPI/PEH
800-834-4969 (USA & Canada) • www.chatsworth.com • techsupport@chatsworth.com
For international phone numbers, see our website or contact CPI Tech Support.

This drawing contains proprietary and confidential information and is protected by U.S. and international law. Unauthorized reproduction, disclosure or use of the drawing or the information therein is expressly forbidden except as agreed to in writing by Chatsworth Products, Inc.

Installation Instructions

IDF CABINET EQUIPMENT RAIL KIT

3. Position equipment mounting rail and fasten by inserting screws into cage nuts (Figure 4). RMU holes should be positioned closest to the door as shown in Figure 5.
4. Adjust position as needed to ensure correct placement of equipment rail and tighten screws to approximately 38 in-lbs (4.3 N-m).
5. Before use, install M5 grounding screws and serrated washers included in cabinet grounding hardware per IIS-725842.

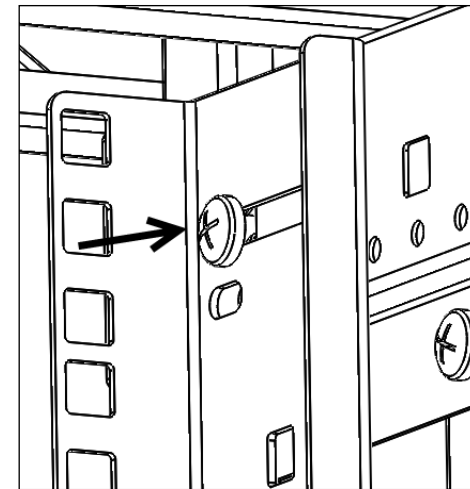


Figure 4

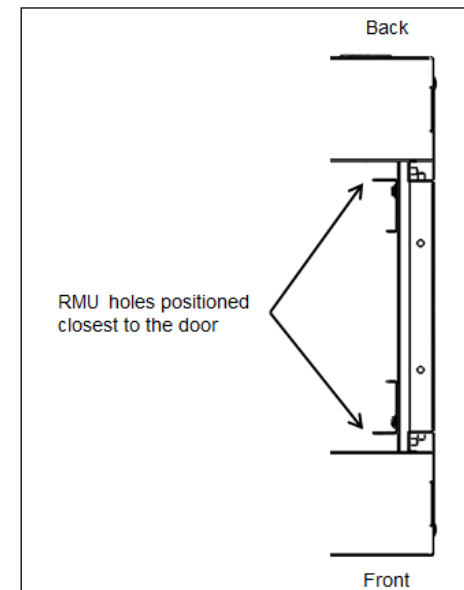


Figure 5

Installation Instructions

IDF CABINET EQUIPMENT RAIL KIT